

Wireless Probe Type Ultrasound Scanner CProbe (Type:C、L、CL、CT)

User's Guide

Prescription Statement "Caution: Federal law restricts this device to sale by or on the order of a physician".

No.: SS-IFU-1701-02 Versions: A/1

Issued date: Nov. 03, 2021

Catalogue

Section 1 INTRODUCTION	1
1.1 Signs and Meaning	1
1.2 TECHNICAL PARAMETERS	2
1.3 INDICATIONS FOR USE	2
1.4 PRECAUTIONS & WARNINGS	3
Section 2 GETTING STARTED	4
2.1 UNPACKING	4
2.2 INSTALLING APP	7
2.2.1 Method 1	7
2.2.2 Method 2	8
2.3 STARTING PROBE	8
2.3.1 Visual inspection.	8
2.3.2 Probe cleaning	8
2.3.3 Boot check	8
2.4 WIRELESS CONNECTION	9
Section 3 APP OPERATIONS	10
3.1 ULTRASOUND scanning	10
3.2 Patient information input	13
3.3 Data measurement	14
3.4 Report download	18
3.5 Image and Video storage	19

3.5.1 Image storage	
3.5.2 Video storage	20
3.6 Image and Video review	20
3.7 Replace the signal channel	20
Section 4 MAINTEANCE	22
4.1 PROBE CHARGING	22
4.2 WATERPROOF IPAD	22
4.3 CLEANING AND DISINFECTION	23
4.4 STORAGE	23
4.5TROUBLE SHOOTING	23
4.6Disposal	24
4.7Proudct maintenance and protection	24
Section 5 Safety	25
5.1 Safety Instructions	25
5.1.2Mechanical Safety	26
5.1.3 Probe Safety	26
5.1.4 Cybersecurity	27
5.2 Principles of Using Acoustic Power	27
5.2.1 Biological Safety	27
5.2.2 Mechanical and Thermal Indices	27
5.2.3 Acoustic Output Statement	28
5.2.3.1 The Influencing Factors of Acoustic Uncertainty	28

5.2.3.2 Differences between Actual and Displayed MI and TI	29
5.2.3.3 Uncertainty of Measurement	29
5.2.4 Operator Control Property	29
5.2.5 Acoustic Power Settings	30
5.2.6 ALARA	30
5.3 Electromagnetic Compatibilities	31
5.3.1 Electromagnetic Emission	31
5.3.2 Electromagnetic Immunity	31
5.3.3 Recommended Separation Distance	34
Appendix A Specifications	35
Appendix B Acoustic Output Data	36

Section 1 INTRODUCTION

The Wireless Probe Type Ultrasound Scanner (Model: CProbe) is a new generation device for ultrasonography with the outstanding feature of wireless.

Different from a traditional ultrasound scanner with a cable connecting from probe to the main unit, no cable appears at the end of the probe of the Scanners. The probe of the Scanner is highly integrated with ultrasound image processing, power management;

It utilizes a wireless technic to connect any iPad from Apple Inc or Apple iPhone which is different from traditional devices. The Probe can be connected with APP through WiFi, making it free from cables.

This manual is intended to provide a thorough overview of the Scanner and should be carefully read before starting to operate the device.

Thank you for your trust in us, it's an honor to satisfy your ultrasonography needs.



Figure 1.1 CProbe Wireless Probe Type Ultrasound Scanner

1.1 Signs and Meaning

Sign	Meaning
<u>^</u>	Warning! Please consult the accompanying document.
(3)	Consult the user manual
⅓	Type BF applied part
IPX5	The direct spray of water in any direction has no harmful effect
((•))	Non-ionizing electromagnetic radiation
•••	Manufacturer

<u>~</u>	Date of manufacture
CN	Serial number (W*PBxxx001,
SN	W means the series of wireless probes,
	* is a letter, S represents a single head convex array, L represents a single head linear
	array continuous
	XXX is a batch number of three letters, and the last three digits are pipelining numbers.)
今	Keep it dry

1.2 TECHNICAL PARAMETERS

1.2.1 General performance

Display: iPad / iPhone Series

The Demission of types is below:

Туре	L (mm)	W (mm)	H (mm)
С	160	66	24
L	158	56	24
CL	160	70	28
СТ	350	70	28

Mode:

Type	Mode	
С	B mode	
	B / M mode	
	Energy Doppler mode (PDI)	
	Pulse Doppler (PW)	
	Color Doppler mode (COLOR)	
	B mode	
	B / M mode	
L	Energy Doppler mode (PDI)	
	Pulse Doppler (PW)	
	Color Doppler mode (COLOR)	
	B mode	
CI	B / M mode	
CL	Color Doppler mode (COLOR)	
	Pulse Doppler (PW)	
СТ	B mode	
	B / M mode	

•	Color Doppler mode (COLOR)
•	Pulse Doppler (PW)

Weight: $\approx 308g$

	Operations	Storage and Transportation	
Relative Humidity	25% to 80%, non-condensing	25% to 93%, non-condensing	
Ambient Temperature	5°C to +35°C	-20°C to +55°C	
Atmospheric Pressure	700hPa to 1060hPa	700hPa to 1060hPa	

Electronic:

Battery Capacity:

Battery Models	Performance	Application models	Continuous
			working time
XDD-SAMS5	3.85Vd.c. 2800mAh	CL、CT	2hours
XDD-SNP5600	3.85Vd.c. 5600mAh	C、L	3hours

Waterproof: IPX5

1.2.2 Feature performance:

Frequency

Туре	Frequency
С	3.5 MHz
L	7.5 MHz
CL	6.5-8.0 MHz
СТ	6.5-8.0 MHz

1.3INDICATIONS FOR USE

The Wireless Probe Type Ultrasound Scanner (Model: CProbe) is intended for diagnostic ultrasound echo imaging, measurement, and analysis of the human body for general clinical applications including obstetrics (OB), gynecology (GY) and general (abdominal) imaging. The application part of this product is the ultrasonic head. Located in contact with the human body.

Contraindications: This device is not suitable for the examination of the site of injury or acute inflammation.

1.4PRECAUTIONS & WARNINGS

- PRECAUTION 1: Read the user manual carefully before operating the device, be familiar
 with the equipment and operation procedures, and strictly implement; the company is not
 responsible for the damage caused by the improper use of the machine and the resulting
 potential adverse consequences;
- PRECAUTION 2: The instrument must work in a clean environment, should avoid direct sunlight, extreme temperature changes, dust, near heat sources, high humidity places, do not place anything on top of the instrument.
- PRECAUTION 3: The device shall be operated in undisturbed conditions to avoid data transmission interruption.
- PRECAUTION 4: When there is wireless channel congestion, switch the channel (Refer to Section 3.6 SETTINGS), and then restart the probe.
- PRECAUTION 5: Prescription Use. The device shall be operated by professional physicians, and should wears gloves before use.
- PRECAUTION 6: The device shall be repaired by a professional recognized by the manufacturer.
- PRECAUTION 7: The device does not have a shelf life. Its expected use life is 10 years. After 10 years, though the device still works normally, it is recommended to have it checked by the manufacturer.
- PRECAUTION 8: Useless components shall be disposed of according to local regulations.
- PRECAUTION 9: Be careful when holding the device, for the device is handheld, it may fall.
- PRECAUTION 10: Pay attention: the words "Insufficient Storage Space" will appear on the interface to remind the user to clean up space when storage space will be insufficient.
- PRECAUTION 11: To avoid increasing the risk of infection, when using intracavitary probes for examination, it is necessary to put on a condom that meets the medical qualification for use, dispose the used condom in the medical waste recycling box after use, and then disinfect and clean the probe according to Section 4.3.
- WARNING 1: The device is not explosion-proof. Do not use it in an inflammable and explosive environment (such as in the presence of anesthetic gas, oxygen or hydrogen, etc.);
- WARNING 2: Instrument is not waterproof, do not spill water or other liquids on the instrument.
- The probe should be turned off when it is not in use. The probe can be safely stopped by pressing the power button for a long time.
- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- Changes or modifications not expressly approved by the party responsible could void the user's authority to operate this device.
- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with

- the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.
- If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - -- Reorient or relocate the receiving antenna.
 - -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - -- Consult the dealer or an experienced radio/TV technician for help.
- The device has been evaluated to meet general RF exposure requirements.
- Patients using cardiac pacemakers are guided by doctors' suggestions.
- Warning: Charging the battery by the operator is at least 1.5 meters away from patients; this product can't operate during charging.

WARNING: The user and/or patient should be reported "any serious incident that has occurred in relation to the device" to the our company and the competent authority of the Member State.

Section 2 GETTING STARTED

FOR YOUR PROTECTION, please read these safety instructions completely before applying power to, or operating the system.

11 7 61	
	The over-high ultrasonic intensity and/ or overtime exposure may
	cause injury.
Caution	Please do not apply the probe of this device to the indication of use
	not covered in this manual.
	This product is identified as a type BF applied part.

2.1 UNPACKING

The Scanner is carefully packed to prevent damage during shipment. Before unpacking, please note any visible damage to the outside of the shipping containers.

Items should be checked in order to ensure that all ordered items have been received. The following table lists the items which should be received with each particular system.

Table 2-1 Items List for The Wireless Ultrasound Scanner

ITEMS	INCLUDED
scanner (C, L, CL, CT)	$\sqrt{}$

Manual	$\sqrt{}$
USB Cable for Charging	$\sqrt{}$
APP	\checkmark
IPad	Optional

Each item should be examined for any noticeable defects or damage that may have occurred during shipment although it is packed carefully. If any defect or damage exists, please contact your local representative immediately to report the problem.

- Button 1: On Off/ Freeze Button: Press the On/Off button for 5 seconds to turn off the power supply.; 3 seconds to turn on the power supply. Short press the button to freeze the interface and press again to remove the freeze.
- Button 2: Depth adjustment Button: The image can be enlarged by pressing the key once and returning to the normal size image after pressing the button three times.
- Button 3: Transmission gain reduction Button: Press the button to reduce the gain.
- Button 4: Transmission gain increase Button: Press the button to increase the gain.

Button 1 Button 2 Button 3 Button 4 Battery capacity Wireless signal status

Picture 2-1 L-probe & C-probe



Picture 2-3 CL-probe & CT-probe

Power-on the probe: press and hold the switch for three seconds
Working probe indicator: There are two indicators in type CT-probe and type
CL-probe; those two types have two probe head, that the indicator will be showing the
activated probe head by lighting direction of the activated probe head.
Charging support: this probe only supports wireless charging.






Picture 2-5 double head (CT-probe&CL-probe)

2.2 INSTALLING APP

2.2.1 Method 1



Find the software and download and install it.

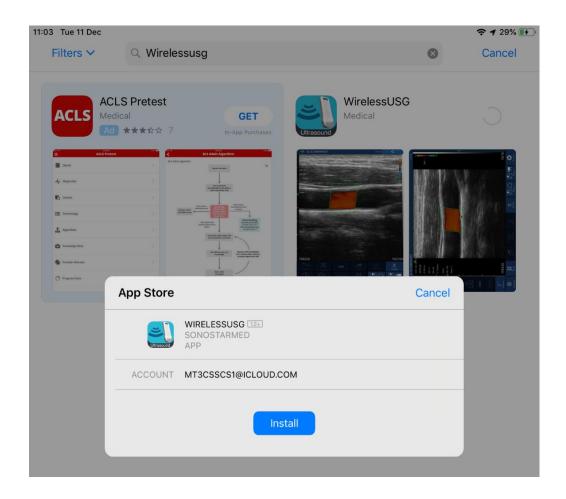

2.2.2 Method 2

Using the two-dimensional code scanning software to scan the two-dimensional code below, you can get the download link of APP for installation.



2.3 STARTING PROBE

2.3.1 Visual inspection

Before and after the ultrasonic visual inspection, check the probe surface or the fuselage sheath for abnormalities such as peeling, cracks, and bulging.

	Abnormal probes can cause electric shock or injury to people. Therefore,
Waring	once any abnormalities are found, you must immediately stop using the
	probe and contact Sonostar.

2.3.2 Probe cleaning

Ultrasonic probes should be cleaned and disinfected before and after the ultrasound examination. Please refer to chapter "4 Cleaning and Disinfection".

Caution	Probes that have not been cleaned or disinfected may cause bacterial and viral infections	
---------	---	--

2.3.3 Boot check

Please check the following before diagnosis

1. The probe should not be abnormally heated during use. The probe can be sensed by hand touching the probe, and if the temperature is significantly higher than the body temperature (or the probe surface temperature exceeds $40 \,^{\circ}$ C). The probe should stop using.

Caution	If the operator places an abnormally hot probe on the surface of the
Caution	patient's skin, it may cause burns.

2. The ultrasound image must not be abnormal after power on, check whether the functions are normal, including software operation, button function, power, etc.

Caution	In the event of any of the above anomalies, the ultrasound imaging diagnostic apparatus may be defective, please contact SonoStar.	5
---------	--	---

The Wireless Connection Indicator and the Battery Capacity Indicator on the probe may be invisible before the probe is turned on.

Press the On-Off Button for 3 seconds to turn on the probe. The Battery Capacity Indicator will be light to indicate the capacity of the battery. The four grids of the indicator imply the battery capacity. (Probe charging will be described in section 4.)

Seconds after the probe is turned on, the Wireless Connection Indicator will be light and blinking to notice that the probe is ready for a wireless connection from the iPad or iPhone.

The probe can be turned off by hold down the button for 5 seconds. When the probe is off, the indicators will be turned off.

2.4 WIRELESS CONNECTION

When the probe is waiting for a wireless connection as described previously, launch the Settings of iPad or iPhone, turn on the Wi-Fi (if not on), Find the SSID of the probe. The SSID is


like: "SS-1 GMBFCA001", the suffix "GMBFCA001" is a code generated from Serial Number. Connect to the SSID with the password same as the Serial Number (in lower case). The Serial Number is in the form of "WSPBFCA001" with the prefix of "WSP". It can be found on the surface of the probe.

After Wi-Fi is connected, launch the WirelessScan App, after the connection from the app to the probe is confirmed, the Wireless Connection Indicator on the probe will be light with no blinking.

Every connection step is done. The operations of using the system to finish the ultrasonography task will be described in the next section.

Section 3 APP OPERATIONS

3.1 ULTRASOUND scanning

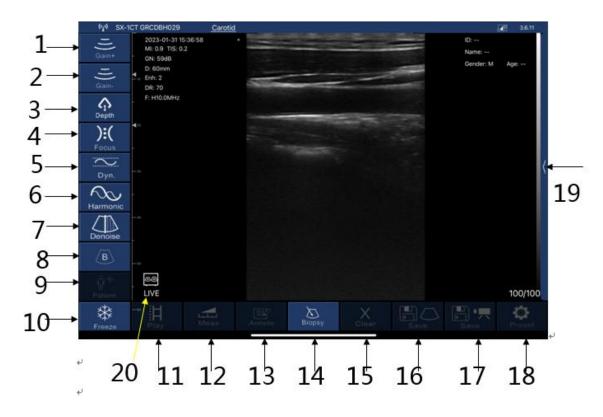


Main interface (Figure 3-1)

The meaning of each icon:

- 1. Transmission Gain +: increase image gain.
- 2. Transmission Gain -: reduce image gain.
- 4. Focus: adjust the focus position of the image.
- 5. Dynamic range: adjust the dynamic range of the image.
- 5. Frequency: can change the working frequency of the probe.
- 6. Noise reduction: used to eliminate low-level echoes caused by noise.
- 7. Noise reduction, image processing
- 8.Image mode: B mode, B / M mode, Color Doppler mode (COLOR), Energy Doppler mode (PDI), Pulse Doppler (PW).
- 9. Patient information management: patient information input.
- 10.Freeze/ operate: image freeze and thaw.
- 11. Movie playback: replay after the image freezes.
- 12.Measurement: distance / area / obstetrical measurement.
- 13. Note: enter a comment on the image.
- 14. Puncture: draw a puncture line for puncture guidance.
- 15. Delete measurements and notes: delete measurement results and notes on images.
- 16. Save the image: save a single image.

- 17. Save Image Video: save whole Image Video.
- 18.Setting: WIFI channel selection to avoid channel blocking.
- 19. TGC (time gain compensation) the function menu pops up by clicking on the top of the right "<".
- 20 BB Dual B mode

Mode introduction:

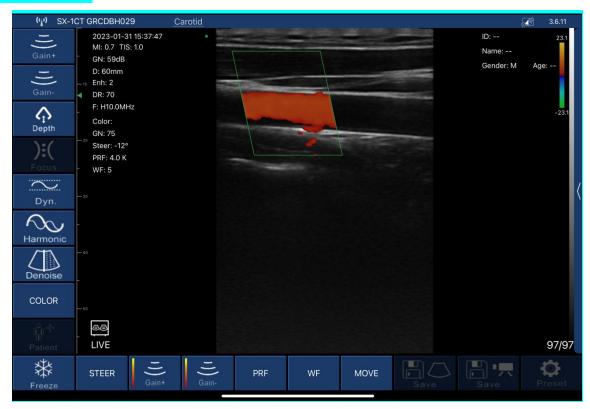

Picture 3-2 Color Doppler imaging mode

Color Doppler imaging mode, Picture 3-2:

- 1. Color sampling frame: change the direction of the color sampling frame.
- 2. Transmission Gain +: increase color blood flow gain.
- 3. Transmission Gain -: reduce color flow gain.
- 4. Move, Zoom: change the position and size of the color sampling frame by clicking and moving with your finger.



Picture 3-3 Energy Doppler imaging mode

Energy Doppler imaging mode, Picture 3-3:

- 1. Color sampling frame: change the direction of the color sampling frame.
- 2. Transmission Gain +: increase energy blood flow gain.
- 3. Transmission Gain -: reduce energy blood flow gain.
- 4.Move, Zoom: change the position and size of the color sampling frame by clicking and moving with your finger.




Picture 3-4 Pulse Doppler imaging mode

Pulse Doppler imaging mode, Picture 3-4:

- 1.Gain +: increase pulse gain.
- 2.Gain -: reduce pulse gain.
- 3.Deflection angle: used to change the angle of the spectrum sampling line in real-time scanning state.
- 4. Sampling frame: change the size of the sampling volume.
- 5. Correction angle: used to change the angle of the blood flow direction cursor.

3.2 Patient information input


Click on the software interface "Patient Information", the interface patient information will pop up as below Picture 3-5 shows:

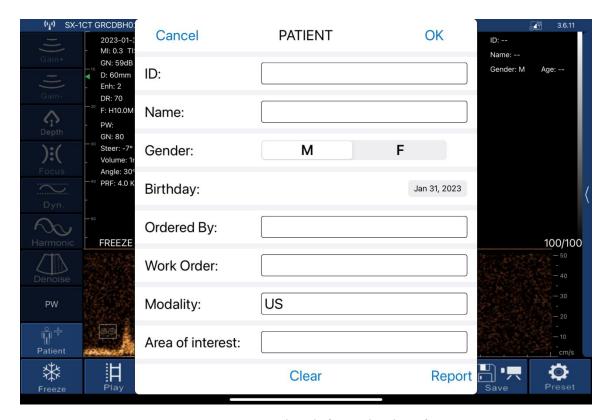

Picture 3-5 Pop-up patient information interface

Enter the patient information in the number and name fields, click on the gender and click OK.

The patient information is entered. If you make a mistake, you can click Cancel or create a new case.

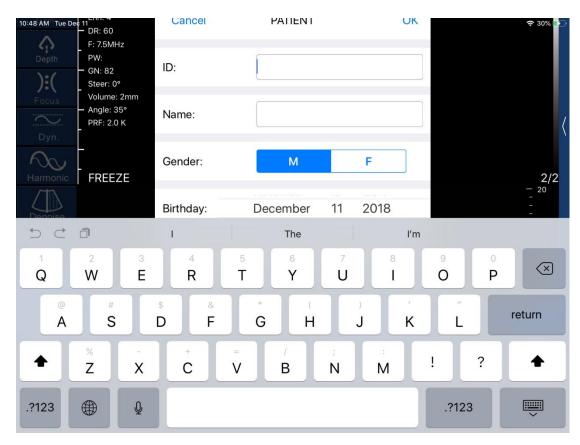

Picture 3-6 Patient Information Editing Interface

3.3 Data measurement


In B/M mode, the position of the sampling line can be adjusted by tapping the moving circle on the screen with your finger (as shown in Picture 3-7 below). KL

First, the interface needs to be frozen. You can freeze the interface by pressing the Freeze Button of the probe or by clicking the Freeze option on the screen. In the frozen state of B/M mode, click the M mode area, the moving circle can appear, the heart rate can be measured, and the default number of cardiac weeks is 5 weeks (five-segment, that is five heartbeat intervals are taken and the average heart rate is calculated).



Picture 3-7 Measuring the heartbeat interface

Click "Measure" in the B mode freeze state, and then the ten measurement functions of the screen shown in Picture 3-8 will pop up. Users should select the appropriate measurement function according to the product probe model, the applicable range and the data to be measured.

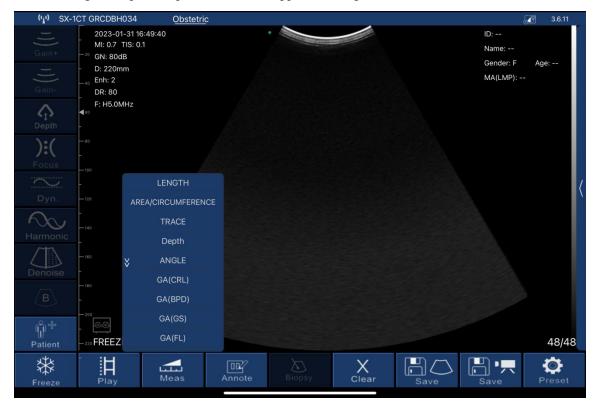

Picture 3-9 Measurement function

After selecting the "LENGTH" length measurement function, click on the two points to be measured in the frozen screen, the measurement trajectory will appear, click the moving point on the trajectory line (as shown in the middle of Figure 3-7), move the trajectory, and adjust the length. The size of the real-time measurement data is displayed at the top right of the screen.

Among them, GA (CRL), GA (BPD), GA (GS), and GA (FL) are measured in the same manner.


Select the "AREA/CIRCUMFERENCE" area/circumference measurement function, select the 3 o'clock position to be measured in the frozen screen and click on it. 3 moving points will appear on the screen, and 3 moving points will automatically form an elliptical trajectory. Click on the moving point to adjust the measurement position, and the measured data will be displayed in real time on the upper right of the screen. Among them, GA (HC) and GA (AC) are measured in the same way.

Select the "ANGLE" angle measurement function to measure the angle. You can select the 3 o'clock position to be measured in the frozen screen and click it will appear 3 moving points on the screen. 3 moving points will automatically form an angle. Click the moving point to adjust the measuring angle. The measured data is displayed in real time on the upper right.

After selecting the "TRACE" track area measurement function, you can measure the irregular position area of the edge, and draw the edge on the screen with your finger to get the area size. The final measured data is displayed at the top right of the screen.

Note: Measurement functions GA (CRL), GA (BPD), GA (GS), GA (FL), GA (HC), and GA (AC) are only available for obstetrics.

The above measurement functions can be fine-tuned using the virtual trackball of the screen. During the measurement, you can click on the generated measurement point, and the virtual trackball that appears (as shown in the lower right corner of Figure 3-10) can be fine-tuned according to the direction of the measurement point.

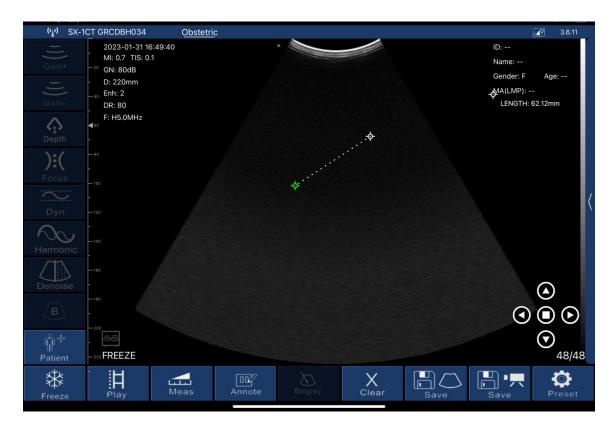

Picture 3-10

Up to 4 sets of data can be measured in the same frozen screen. After the measurement, press "Clear X" to delete all measurement results. If you want to delete a measurement, click on the measurement data at the top right of the screen to display the result.

3-11, Within the same freeze frame, the measurement can be at most four sets of data. After finish the measurement, press the "remove X" can delete all measurements; if you want to delete one measurement, click measuring data result on the top right screen, immediately appear below as shown in figure 3 to 11, click " \otimes " on the right side of the data, delete the measurement data.



Figure 3-11 Delete part of the measurement data

3.4 Report download

Click on the "patient information" on the lower left of the software interface, then pop-up below patient information interface.

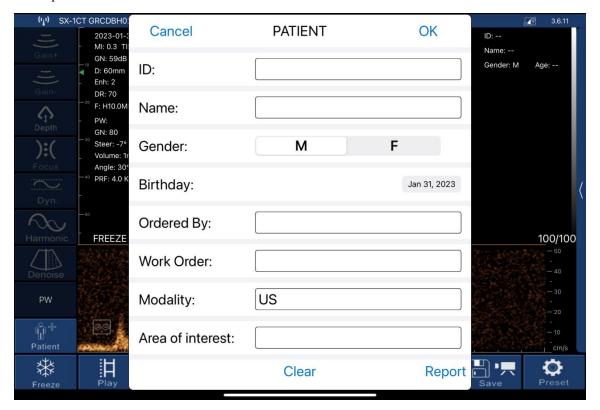


Figure 3-12 pop-up patient information interface.

Click on "report", pop up the interface below as shown in figure 3-13, click on the "tip" box, the user can input content in dialog box. Click on download icon "on the lower right of the page, and then the report can be downloaded. The reports are stored automatically in the smart terminal display system (apple mobile phone, or tablet) photo album.

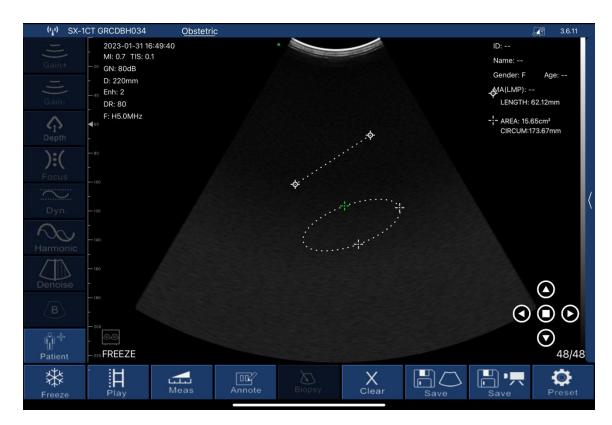


figure 3-13 patient information download interface

3.5 Image and Video storage

3.5.1 Image storage

Click on "save image" on the bottom right in below interface (FIG. 3-14), then save the image displaying on the screen at the moment. The image is automatically stored in the smart terminal display system (apple mobile phone, or tablet) photo album.



Picture3-14

3.5.2 Video storage

Click on "save Video" on the bottom right in above interface (FIG. 3-14), then the Video starting from the operation within 100seconds are stored in the smart terminal display system (apple mobile phone, or tablet) photo album.

3.6 Image and Video review

Open the photo album of the smart terminal display system (apple mobile phone, or tablet), and then review the saved image and Video.

3.7 Replace the signal channel

In the WIFI crowded environment, the user can choose different WIFI channel for the probe. Press "set" key, then pop up the signal channel selection list (as showed in figure 3-15), click select channel. After 2 seconds, please restart the probe and connect with intelligent terminal display screen according to 3.1 step.

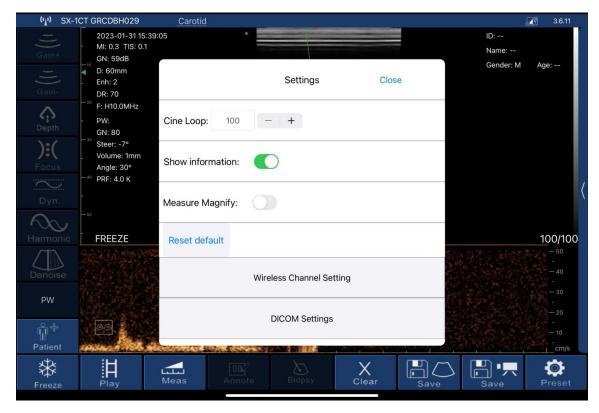


Figure 3-15

Section 4 MAINTEANCE

4.1 PROBE CHARGING

When the battery is insufficient, the probe needs to be charged. Place the probe on the wireless charger. As shown in Figure 4-1, the battery capacity indicator flashes when charging.

If all four grid lights and indicator lights do not flicker, the battery is fully charged. After charging, only need to put the probe in the appropriate storage environment, in order to avoid damage to the instrument.



Figure 4-1 Charge the Probe

	If the adapter power supply voltage is beyond the scope of instrument
	regulation adaptation (normal adapter output voltage is 5 V $+$ / - 0.5 V),
Caution	it shall not be used.
	Power and wireless charger adapters need to use products tested by IEC60601-1.

4.2 WATERPROOF IPAD

We will provide a waterproof bag if you using iPad as the accessory. Users can use it to protect the iPad when it is used in humidity or dirty fields.

• The manufacturer not providing iPad and iPhone, the user should configurate this accessory by themselves.

4.3 CLEANING AND DISINFECTION

4.3 CLEANING AND DISINFECTION

4.3.1 Precaution and warnings

When cleaning and disinfecting:

- Follow the procedures in the order they are described in this guide, without skipping steps.
- Follow the manufacturer's instructions, recommendations, and guidelines for cleaners and disinfectants, as well as your regional regulations.
 - Check expiry dates, concentration, and efficacy of the chemicals used.
- Wear the appropriate personal protective equipment (PPE), such as eyewear and gloves, as recommended by the chemical manufacturer.
- Repeated use and cleaning over the course of the scanner's life may deteriorate its cleanliness.
 - Using incompatible solutions to clean the scanner may damage its surface.
- Cleaning or disinfecting the scanner while the battery is installed may cause the battery to short-circuit and overheat, causing an electric shock or burn.

WARNING: During an emergency where the scanner is used to examine multiple patients in a short period of time, the lack of proper cleaning and disinfecting between patients may spread infections to other patients and users.

Put on a condom that meets the medical qualification for use, dispose the used condom in the medical waste recycling box after use, and then disinfect and clean the probe

4.3.2 Cleaning and Disinfection the probe

- 1. Thoroughly dry the instrument with a clean, soft cloth before using.
- 2. To clean the probe, Use a soft cloth dampened with 75%Alcohol to wipe the Probe until it is thoroughly cleaned.
- 3. To remove all traces of disinfectant solution, wipe the instrument with a clean soft cloth dampened in sterile water or potable tap water. Wiping the device three separate times to remove all residual disinfectant is recommended.
 - 4. Verify that all gel, particulate matter, and bodily fluids have been removed.
 - 5. Dispose the soft cloth and the instrument used to insert the cloth.

4.4 STORAGE

When not in use, it is recommended that the equipment should be put in the case. While stored, the equipment should be protected from temperature extremes.

4.5TROUBLE SHOOTING

Inspect: check if the probe and the scanner is properly connected.

Fault handling:

Ite Failure	Problem	Solution
-------------	---------	----------

1	No response after press the power switch	Charging, check the power supply
2	Intelligent display can't connect probe WIFI	Check the WIFI signal channel is ready; test whether the WIFI password input is correct
3	Displayed on the screen with interference like snow	Check if other equipment started which cause electromagnetic interference, shut down the device or get far from the device.
4	The image not bright	Adjust brightness

4.6 Disposal

- *Warning: products should not be discarded at will.
- -Battery recycling meets local requirements.
- -Recycling of waste electrical and electronic products should comply with local laws and regulations.

WARNING: The user and/or patient should be reported "any serious incident that has occurred in relation to the device" to the our company and the competent authority of the Member State.

4.7 Proudct maintenance and protection

- 1, this product usage and storage conditions shall comply with the environmental conditions of section 1.5 in this manual.
- 2, The product power supply shall be in accordance with section 1.2 of this manual.
- 3, If Stop using this product for a long period of time, ensure charging at least twice a week, every time not less than 1 hour.
- 4, please do not open the probe cover for cleaning, shake or dismantle the components inside the probe.
- 5, Clean and wipe the probe cover by alcohol cotton, and should be operated in the power-off state.
- 6, this product should not be frequent startup and shutdown. After shutdown if needed to start up again, please wait at least 1 minute of time for boot operation.
- 7, if instrument malfunction occur, pls ask professional staff for maintenance.
- 8, probes are valuable and vulnerable part, any collision or drop is forbidden.
- 9, Suspended in the diagnosis process, please press the button for freeze. The system in the frozen states benefit to probe for long-term use.
- 10, Apply the medical ultrasound coupling agent which complies with relevant

standards when using the probe.

- 11, the structure of the probe is watertight, prohibit any conductive liquid immersion so as to avoid corrosion of the probe and the fuselage.
- 12,Probe into liquid shall not exceed the probe water lines, and regularly check for cracks in order to avoid liquid immersion and damage to internal components.
- 13, After each usage, please refer to chapter 4.3 of this manual for cleaning and disinfection.
- 14, To maintain the performance and safety of the system, electric and mechanical safety inspections for the system should be performed periodically by professional technicians in less than 6 months.
- 15, When the product is damaged due to impact drop, it should contact after-sale for maintenance and calibration. Detailed contact information can be found after-sale.

Section 5 Safety

The operation safety is the most important concern of the designer. To ensure the safety and efficiency of the system, the operator should read carefully about this chapter before using the system.

5.1 Safety Instructions

Read and understand all precautions in this manual before using the system.

Keep this manual with the system at all times. Periodically review the procedures for operation and safety precautions.



- Do not use the system in the applications other than those listed in the intended use. Otherwise, it
 may result in system damage or serious injury.
- This equipment can only be used for diagnosis, cannot be used for treatment.

5.1.1Electric Safety

- The biocompatibility of this product has been verified, in normal circumstances, it will not bring harm to the operator or patient.
- No modification of this equipment is allowed.
- If any operator requests more information such as circuit diagrams, parts list and product descriptions, for repairs carried out by qualified technical personnel, please contact us.
- Please check and replace the battery periodically by after-sale. When the continuous working time of batteries is less than 2 hours, you can contact after-sales for battery replacement.

Replacing batteries requires unscrewing the shell screw with a special screwdriver, carefully opening the shell, then taking out the old batteries directly, installing new batteries, and sealing the edges with glue when reinstalling the machine.

- Do not pour any fluid onto the ultrasound system surfaces, as fluid seepage into the electrical circuitry may cause excessive leakage current or system failure. If carelessly pour any water onto the system, immediately stop using the ultrasound system and contact Service Representative immediately.
- Only use the probes provided by the manufacturer. Otherwise, the ultrasound system cannot be performed, and an accident such as a fire may result in the worst case.
- The machine that are not serviced or maintained can not be used on the patient.
- The outer surface of the portions of transducer assembly which is intended to be inserted into a PATIENT should be checked to ensure that there are no unintended rough surfaces, sharp edges or protrusions which may cause harm.

• Please read the instructions and then set and control the acoustic output levels.



- Only qualified physicians or sonographers can perform ultrasound scanning on human body for medical diagnosis.
- The system can only be maintained by the person authorized or trained by the manufacturer.
- The transducer is treated as the applied part.
- Do not operate this system in an atmosphere containing flammable gases or liquids such as anesthetic gases, hydrogen, and ethanol, because there is an danger of explosion.
- Do not use this system at the same time with other equipment such as electric knife, defibrillator, and other high-frequency therapy equipment. Otherwise, there is danger of electric shock.
- keep the system dry, avoid beding transported to the field with a great temperature change to prevent condensation or water droplets from resulting in short circuit

5.1.2Mechanical Safety



- Be careful when holding the device, for it is handhold, it may fall.
- Do not use shell cracking equipment.



- Do not use this system in the strong electromagnetic field. Using the system in the improper environment may result in malfunction or damage.
- Only the peripherals and accessories (such as probes, peripherals or cables) provided or recommended by the manufacturer can be used. Using other devices or accessories may degrade the system performance and even cause an electrical shock.



 Do not place the system on a tilted plane with the angle larger than 10°. Otherwise, the system will fall off to cause system damage or personal injury.

5.1.3 Probe Safety

 You should use the legally marketed medical ultrasound couplants. Please check the user instruction carefully before using it, please manage and use the ultrasound couplants correctly to prevent it being polluted.



• Disconnect the probe from the system after freezing an image or powering off the system. Otherwise, the system or the probe could be damaged.



- Use the probe carefully. If any part of the transducer surface is scratched, immediately stop using the probe. Otherwise, there is a danger of electric shock.
- After disinfecting the accessories, chemicals must be washed out from the accessories. Remaining
 residual chemicals or gases could not only result in damage to the accessories but also can be
 harmful to human bodies.

5.1.4 Cybersecurity

- •In order to avoid database loss and damage, please back up the database regularly.
- •The probe can be connected to mobile device IPad or IPhone by wireless local network. The software itself can not be connected to external network, the network the software is connected to is the local wireless network launched by the probe.
- During usage, if there is any software bug, the user can do feedback via company email: sonostar@sonostar.net, then the company will do analysis and modification according to the bug, if there is needs for update, there will be update notification via email to remind the user to do update.

5.2 Principles of Using Acoustic Power



- Perform ultrasound procedures prudently under the guidance of the ALARA (as low as reasonably achievable) principle. Expose the patient to the lowest practical transmit power levels in the shortest possible period to achieve a satisfactory diagnosis.
- The operator should notice the effect of the heat on the patient body when the exam is performed
 around the bones and the nearby soft tissues which can transform the ultrasound energy to heat
 energy. Take special care to the fetal whose bones are growing.

5.2.1 Biological Safety

Diagnostic ultrasound is recognized as being safe, but the risk of biological effects exists when using it in high exposure levels and long exposure times. Thus ultrasound should be used in a prudent manner to provide medical benefit to the patient.

5.2.2 Mechanical and Thermal Indices

The ultrasound system displays two parts: thermal Index (TI) and Mechanical Index (MI). The MI/ TI value of the machine is real time displayed at the upper right corner, regarding how to change TI display type, please choose: **Preset** \rightarrow [System Preset] \rightarrow [TI].

■ Meaning of MI/TI

Mechanical bioeffects are threshold phenomena that occur when a certain level of output is exceeded. The threshold level varies with tissue type. The potential mechanical bioeffects varies with peak pressure and ultrasound frequency. The higher the MI value, the greater the likelihood of mechanical bioeffects occurring. There is no specific MI value theat means that a mechanical effect is actually occurring. The MI should be used as guide for implementing the ALARA principle.

The TI value informs the operator about the conditions that might lead to an increase in temperature at surface of the body, within the body tissue, or at the point of focus of the ultrasound beam on bone. That is, the TI value informs the operator about the potential temperature rise in body tissue. It is an estimate of temperature increase in body tissue with specific properties. The actual amount of an temperature rise is influenced by factor such as tissue type, vascularity, mode of operation and others. The TI value should be used as a guide for implementing the ALARA principle. Depending on the examination and type of tissue involved, TI could be one of three types.

Soft Tissue Thermal Index (TIS) is used when imaging soft tissue only, it provides an estimate of potential temperature rise in soft tissue.

- Bone Thermal Index (TIB) is used when bone is near the focus of the image as in the third cropester OB examination, it provides an estimate of potential temperature rise in the bone or adjacent soft tissue.
- Cranial Bone Thermal Index (TIC) is used when bone is near the skin surface as in transcranial examination, it provides an estimate of potential temperature rise in the bone or adjacent soft tissue.

■ Precision of MI/TI

TI and MI values are displayed in real time on the screen. The operator should observe these index values during examinations and ensure that exposure time and output values are maintained at minimum amounts needed for effective diagnosis. The MI and TI precision is 0.1.

5.2.3 Acoustic Output Statement

5.2.3.1 The Influencing Factors of Acoustic Uncertainty

When estimating accuracy of displayed numerical values, many factors are considered:

- •The probe changeability
- •The system changeability
- Changeability and accuracy of measurement
- •Possible operating conditions and testing numbers needed to obtain displayed result accuracy of the diagnostic system
- •Whether the display accuracy depends on specific system combination, mode combination, probe component and launch mode combination, or all of above
- Algorithm accuracy of the system software used to calculate the MI/TI

5.2.3.2 Differences between Actual and Displayed MI and TI

For many assumptions used in the process of measurement and calculation, actually they are conservative. For most organizations path, high estimate is made in the measurement and calculation process of tissue exposure intensity. For example, using attenuation coefficient 0.3dB cm⁻¹ MHz⁻¹ much lower than the actual human tissue attenuation coefficient, choosing conservative values of tissue characteristic. Therefore, displayed MI and TI values should be relative information for reference, they serve to indicate to the operator whether a particular setting of the system increases or decreases the possibility of Thermal or Mechanical effect, used to help the operator be careful to use ultrasonic diagnostic system and follow the ALARA principle, these values cannot be equal to actual values.

5.2.3.3 Uncertainty of Measurement

Sound pressure is the most basic data of sound field measurement, and other sound field parameters can be deduced from sound pressure, so when analysing measurement uncertainty, only take sound pressure for analysis and uncertainty of other parameters can be deduced from the sound pressure.

Measurement uncertainty mainly include repeated measurement uncertainty and the system uncertainty, the system uncertainty is an order of magnitude higher than repeated measurement uncertainty, so the main analysis is the system uncertainty. Mainly decided by the following factors:

- The sensitivity of hydrophone: According to hydrophone calibration report provided by ONDA company, the maximum allowable error of sound pressure for hydrophone is plus or minus 12%;
- 2. Scope: according to agilent DSO6502A specifications, its effect on the sound pressure is plus or minus 2%;
- 3. Temperature: effect of the thermocouple on sound pressure error is plus or minus 4%;

Above all uncertainty components are not related, synthetic standard uncertainty of sound pressure is :plus or minus 13%.

5.2.3.4 Measurement accuracy

Measurement accuracy – Curved array (Type C)

Measurement	Unit	Useful range	Accuracy
Axial	cm or mm	1mm-50mm	±1mm or ±5%
			whichever is
			greater
Lateral	cm or mm	2mm-40mm	±2mm or ±8%
			whichever is

			Greater
Circumference (ellipse)	cm or mm	10mm-300mm	±10% or ±2mm
			whichever is
			greater

Measurement accuracy – linear array (Type CT)

Measurement	Unit	Useful range	Accuracy
Axial	cm or mm	1mm-40mm	±1mm or ±5%
			whichever is
			greater
Lateral	cm or mm	2mm-30mm	±2mm or ±8%
			whichever is
			Greater
Circumference (ellipse)	cm or mm	5mm-150mm	±10% or ±2mm
			whichever is
			greater

Measurement accuracy - linear array (Type L, Type CL)

Measurement	Unit	Useful range	Accuracy
Axial	cm or mm	1mm-50mm	±1mm or ±5%
			whichever is
			greater
Lateral	cm or mm	2mm-40mm	±2mm or ±8%
			whichever is
			Greater
Circumference (ellipse)	cm or mm	5mm-150mm	±10% or ±2mm
			whichever is
			greater

5.2.3.5 Accuracy of the displayed acoustic output

Parameter	Displayed acoustic output accuracy	Measurement uncertainty B-mode and Color doppler mode	
Pressure, MI	±25%	±15%	
Power, TI	±50%	±30%	

Accuracy of the displayed acoustic output = (Measured value - Acoustic output display value) / Acoustic output display value *100%

5.2.4 Operator Control Property

There are three types of operation control related to the generation of mechanical/thermal effect:

direct control and indirect control, receiver control. Qualified operator should try to cut down the acoustic output in the premise of effective diagnostic images.

■ Direct control The direct control of the acoustic output of this system is adjusting voltage size. But its maximum acoustic output shouldn't be more than displayed acoustic output limit in any modes.

■ Indirect control

The controls that indirectly affect output are many imaging parameters. These are operating modes, frequency, focal point number/position, image depth and pulse repetition frequency (PRF)(By adjusting the [Scale] of the toolbar).

The operating mode determines whether the ultrasound beam is scanning or non-scanning. Thermal effect is closely connected to M Mode, PW Doppler and Color Mode.

Acoustic attenuation of tissue is directly related to transducer frequency.

The focal point number and position is related to active aperture of transducer and beam width.

For the pulse repetition frequency(PRF)(By adjusting the [Scale] of the toolbar), the higher the PRF, the more acoustic output power increased over a period of time.

■ The receiver control

The receiver control does not affect the acoustic output, including gain, dynamic range, and image processing, etc. Therefore, in the image optimization, should adjust the receiver control to optimize images firstly, the second are through direct control and indirect control.

When acquiring images, it is recommended to use the default (or as low as possible) acoustic output location, and use the gain control to compensate. The default setting is commonly 70% of maximum allowed acoustic output value, which will not cause harm to the operator, and for the probe is the most effective value

5.2.5 Acoustic Power Settings

The ultrasound system has been preset the parameters for each exam mode with different probes before shipment. When the ultrasound system is powered on, a new patient is created or the application mode is changed, the system will retrieve the default settings. You can also reset the parameters.

5.2.6 ALARA

It is required to practice ALARA when using ultrasound energy. Practicing ALARA ensures that the total energy level is controlled below a low level at which bioeffects are not generated while diagnostic information is being accumulated. The total energy is controlled by output intensity and total radiation time. The output intensity necessary for examinations differs depending on the patient and clinical case.

Not all examinations can be performed with an extremely low level of acoustic energy.

Controlling the acoustic level at an extremely low level leads to low-quality images or insufficient Doppler signals, adversely affecting the reliability of the diagnosis. However, the sound power which is used greater than the actual needs does not contribute to improving the quality of diagnostic information either, it will increase the risk of biological effects.

The operator must take responsibility for the safety of patients.

5.3 Electromagnetic Compatibilities

Electromagnetic compatibilities are the abilities of the system or equipment to operate normally in the electromagnetic environment and not to radiate any electromagnetic interruptions to any other objects which are in the same environment.

This system is designed in accordance with the current EMC requirement. And the ultrasound image will degrade instantly if the system is used in the electromagnetic field environment. If the degradation of the image is found, it is recommended to inspect the operation environment to confirm the radiation source.

5.3.1 Electromagnetic Emission

This system is applicable for the following environment. You should use this system under the suggested environment.

1	Guidance and manufacturer's declaration - electromagnetic emission					
	The CProbe Wireless Probe Type Ultrasound Scanner is intended for use in the					
2	electromagnetic environment specified below. The customer or the user of CProbe Wireless					
	Probe Type Ultrasound Scanner should assure that it is used in such environment.					
3	Emission test Compliance Electromagnetic environment - guidance					
4	RF emissions CISPR 11	Group 1	The CProbe Wireless Probe Type Ultrasound Scanner uses RF energy only for its internal function. Therefore, its RF emissions are very low and are not likely to cause any interference in nearby electronic equipment.			
5	RF emissions CISPR 11	Class B	The CProbe Wireless Probe Type Ultrasound Scanner is suitable for use in all establishments, including domestic establishments and those directly connected			
6	Harmonic emissions IEC 61000-3-2	Class A	to the public low-voltage power supply network that supplies buildings used for domestic purposes.			
7	Voltage fluctuations / flicker emissions IEC 61000-3-3	Complies				

5.3.2 Electromagnetic Immunity

Guidance and manufacturer's declaration - electromagnetic immunity

The CProbe Wireless Probe Type Ultrasound Scanner is intended for use in the electromagnetic environment specified below. The customer or the user of the CProbe Wireless Probe Type Ultrasound Scanner should assure that it is used in such an environment.

Immunity	IEC 60601	Compliance	Electromagnetic environment - guidance
Test	Test Level	Level	
Electrostatic discharge (ESD)	±6kV contact	±6kV contact	Floors should be wood, concrete or ceramic tile.
IEC61000-4	±8kV air	±8kV air	If floors are covered with synthetic material, the relative humidity should be at least 30%.
Electrostatic transient \ burst IEC 61000-4-4	±2 kV for power supply lines ±1 kV for input output lines	±2 kV for power supply lines ±1 kV for input output lines	Mains power qualityshould be that of a typical commercial or hospital environment.
Surge IEC 61000-4-5	±1kV differential mode ±2kV common mode	±1kV differential mode ±2kV common mode	Mains power quality should be that of a typical commercial or hospital environment.
Voltage dips, short interruptions and voltage variations on power supply input lines IEC 61000-4-11	< 5%U _T (>95% dip in U _T) for 0.5 cycle 40%U _T (60% dip in U _T) for 5 cycles 70%U _T (30% dip in U _T) for 25 cycles < 5%U _T (>95% dip in	< 5%U _T (>95% dip in U _T) for 0.5 cycle 40%U _T (60% dip in U _T) for 5 cycles 70%U _T (30% dip in U _T) for 25 cycles < 5%U _T	Mains power qualityshould be that of atypical commercial or hospital environment. If the user of the CProbe Wireless Probe Type Ultrasound Scanner requires continued operation during power mains interruptions, it is recommended that the CProbe Wireless Probe Type Ultrasound Scanner be powered from an uninterruptible power supply or a battery.

	U _T) for 5 sec	(>95% dip in U _T) for 5 sec	
Power frequency (50/60 Hz) Magnetic field IEC 61000-4-8	3 A/m	3 A/m	Power frequency magnetic fields should be at levels characteristic of a typical location in a typical commercial or hospital environment.

 \mbox{NOTEU}_T is the a.c. mains voltage prior to application of the test level.

5.3.3 Recommended Separation Distance

The CProbe Wireless Probe Type Ultrasound Scanner is intended for use in an electromagnetic environment in which radiated RF disturbance are controlled. The customer or the user of the CProbe Wireless Probe Type Ultrasound Scanner can help prevent electromagnetic interference by maintaining a minimum distance between portable and mobile RF communications equipment (transmitters) and the the CProbe Wireless Probe Type Ultrasound Scanner as recommended below, according to the maximum output power of the communications equipment.



If the system has generated the interference (confirmed by powering on and off the system), you or the qualified service personnel should solve the problem by following the steps as below:

- Reposition the affected system.
- Place this system further away from the affected system.
- Supply power to this system in other ways other than the way used currently.
- Contact the manufacturer as soon as possible.

Rated	Separation	distance according to freque	ency of transmitter (m)
Maximum Output Power of Transmitter (W)	150 kHz to 80 MHz $d = \left[\frac{3.5}{V1}\right] \sqrt{P}$	80 MHz to 800 MHz $d = \left[\frac{3.5}{E1}\right] \sqrt{P}$	800 MHz to 2.5 GHz $d = \left[\frac{7}{E1}\right] \sqrt{P}$
0.01	0.12	0.12	0.23
0.1	0.38	0.38	0.73
1	1.2	1.2	2.3
10	3.8	3.8	7.3
100	12	12	23

For transmitters rated at a maximum output power not listed above, the recommended separation distance d in meters (m) can be estimated using the equation applicable to the frequency of the transmitter, where P is the maximum output power rating of the transmitter in watts (W) according to the transmitter manufacturer.

NOTE 1: At 80 MHz and 800 MHz, the separation distance for the higher frequency range applies.

NOTE 2: These guidelines may not apply in all situations. Electromagnetic propagation is affected by absorption and reflection from structures, objects and people.

Appendix A Specifications

Complied Standards

EN 60601-1 (IEC 60601-1), Medical electrical equipment Part 1: General requirements for basic safety and essential performance, Class I, BF, continuous operation EN 60601-2-37:2008 (IEC 60601-2-37:2007), Medical Electrical Equipment Part 2-37: Particular Requirements for the Basic Safety and Essential Performance of Ultrasonic Medical Diagnostic and Monitoring Equipment EN 60601-1-2:2007 (IEC 60601-1-2:2007), Class A

Type of protection against electric shock

Internally powered

Degree of protection against electric shock

Type-BF applied part

Operation mode

Continuous working

Safety Types Installation and operation type

Portable Equipment

Degrees of protection against harmful liquid

IPX5

Degree of safety of application

_

The equipment is not suitable for use in the presence of a flammable anesthetic mixture with air, oxygen or

nitrous oxide.

Operating system requirements

IOS 9.0 and above version.

IPad is the Wi-Fi signal transmitted by the Wi-Fi module of the scanner. It is a local area network, not connected to the Internet, but only used for signal and data transmission.

The information using wifi communication is as follows:

IT Security or Wi-Fi

Working frequency band (MHz)	2400-2483.5
Receiving frequency (MHz)	2412-2462
Modulation type	802.11b/g/n
Frequency characteristic	Suitable for short-distance
	micro-power wireless
	communication equipment
Effective radiated power	<mark>8mW</mark>

Operations Storage and Transportation

Environm ental Requirem ent

Relative Humidity 25% to 80%, non-condensing

25% to 93%, non-condensing

Ambient Temperature 5°C to +35°C -20°C to +55°C

Atmospheric Pressure 700hPa to 1060hPa 700hPa to 1060hPa

Max. Altitude 3000m 3000m

Appendix B Acoustic Output Data

These data are acquired through the test report of IEC 60601-2-37.

Acoustic Output Reporting Table for Track 3

Transducer Model: 6C SN:WAPBIKA006

Operating Model: B Mode

					TIS		TIB	
Ir	ndex Label		MI		non-	scan		TIC
				scan	A _{aprt} ≤1	A _{aprt} >1	non-scan	
Global Ma	ximum Ind	ex Value	1.35	0.14	N/A	N/A	N/A	N/A
	p _{r.3}	(MPa)	2.08					
	\mathbf{W}_0	(mW)		31.10	N/A		N/A	N/A
	Min	of[$W_{.3}(z_1)$,				N/A		
	$I_{TA.3}(z_1)$	(mW)				IN/A		
Associated	z_1	(cm)				N/A		
Associated Acoustic	Z _{bp}	(cm)				N/A		
Parameters	Z _{sp}	(cm)					N/A	
Farameters	z@PII.3ma	(cm)	3.96					
	$d_{eq}(Z_{sp})$	(cm)					N/A	
	f_c	(MHz)	2.39	2.39	N/A	N/A	N/A	N/A
	Dim of	X(cm)		2.50	N/A	N/A	N/A	N/A
	A_{aprt}	Y (cm)		1.30	N/A	N/A	N/A	N/A
	PD	(usec)	0.54					
	PRF	(Hz)	1598.50					
Other	pr@PIImax	(MPa)	2.89					
Information	deq@PIIm	ax (cm)					N/A	
Illioilliation	Focal	FL _x (cm)		4.00	N/A	N/A		N/A
	Length	FL _y (cm)		8.00	N/A	N/A		N/A
	I _{PA.3} @MI	max(W/cm ²)	149.10					
	Display f	ocus(mm)	40	40	N/A	N/A	N/A	N/A
Operating	Display d	epth(mm)	90	90	N/A	N/A	N/A	N/A
Control Conditions	Working frequency(MHz)		H5.0	H5.0	N/A	N/A	N/A	N/A
Conditions	Display for number	ocus	1	1	N/A	N/A	N/A	N/A
NOTE: N/A i	ndicates th	at there is no	correspond	ding intend	ed use or no	data reporte	ed.	

Transducer Model: 6C SN:WAPBIKA006

Operating Model: B+M Mode

1		D WI WIOUC			TIS		TIB	
It	ndex Label		MI			scan		TIC
				scan	A _{aprt} ≤1	A _{aprt} >1	non-scan	
Global Ma	ximum Ind	ex Value	1.35	0.14	N/A	0.21	1.28	N/A
	p _{r.3}	(MPa)	2.08					
	W_0	(mW)		31.10	N/A		31.10	N/A
	Min	of[W.3(z1),				19.76		
	$I_{TA.3}(z_1)$	(mW)				18.76		
Associated	z_1	(cm)				3.06		
Acoustic	Z _{bp}	(cm)				3.04		
Parameters	Z _{sp}	(cm)					3.86	
1 arameters	z@PII.3ma	(cm)	3.96					
	$d_{eq}(Z_{sp})$	(cm)					0.29	
	fc	(MHz)	2.39	2.39	N/A	2.39	2.39	N/A
	Dim of	X(cm)		2.50	N/A	2.50	2.50	N/A
	A _{aprt}	Y (cm)		1.30	N/A	1.30	1.30	N/A
	PD	(usec)	0.54					
	PRF	(Hz)	1598.50					
Other	pr@PIImax	(MPa)	2.89					
Information	d _{eq} @PII _m	ax (cm)					0.29	
Illioillation	Focal	FL _x (cm)		4.00	N/A	4.00		N/A
	Length	FL _y (cm)		8.00	N/A	8.00		N/A
	I _{PA.3} @MI	max(W/cm ²)	149.10					
	Display f	ocus(mm)	40	40	N/A	40	40	N/A
Operating		epth(mm)	90	90	N/A	90	90	N/A
Control Conditions	Working frequency	Working frequency(MHz)		H5.0	N/A	H5.0	H5.0	N/A
Conditions	Display focus number		1	1	N/A	1	1	N/A
NOTE: N/A i	ndicates th	at there is no	correspond	ding intend	ed use or no	data reporte	ed.	

Transducer Model: 6C SN:WAPBIKA006 Operating Model: B+Color/B+PDI Mode

орини	ig iviouei.	B+Color/B+I	DI Wode		TIS		TIB	
It	ndex Label		MI		non-	-scan		TIC
				scan	A _{aprt} ≤1	A _{aprt} >1	non-scan	
Global Ma	ximum Ind	ex Value	1.35	0.15	N/A	N/A	N/A	N/A
	$\begin{array}{c ccccccccccccccccccccccccccccccccccc$	(MPa)	2.08					
				B:24.10				
	\mathbf{W}_0	(mW)		Color:	N/A		N/A	N/A
				8.66				
	Min	of[W.3(z1),				NT/A		
	$I_{TA.3}(z_1)$	(mW)				N/A		
٨ ـ ـ ـ ـ : ـ ـ ـ ـ ـ ـ ـ ـ ـ ـ ـ ـ ـ ـ	z_1	(cm)				N/A		
Associated Acoustic	Z _{bp}	(cm)				N/A		
Parameters	Z _{sp}	(cm)					N/A	
1 arameters	z@PII.3ma	(cm)	3.96					
	$d_{eq}(Z_{sp})$	(cm)					N/A	
				B:2.39				
	f_c	(MHz)	B:2.39	Color:2	N/A	N/A	N/A	N/A
				.44				
	Dim of	X(cm)		2.50	N/A	N/A	N/A	N/A
	A _{aprt}	Y (cm)		1.30	N/A	N/A	N/A	N/A
	PD	(usec)	B:0.54					
			2957.30					
Other			2.89					
Information	d _{eq} @PII _m	ax (cm)					N/A	
information	Focal	FL _x (cm)		4.00	N/A	N/A		N/A
	Length	FL _y (cm)		8.00	N/A	N/A		N/A
	I _{PA.3} @MI	max(W/cm ²)	149.10					
			40	40	N/A	N/A	N/A	N/A
		lepth(mm)	90	90	N/A	N/A	N/A	N/A
Operating			B:H5.0	B:H5.0				
Control	frequency	y(MHz)	Color:2	Color:2	N/A	N/A	N/A	N/A
Conditions	_		.5	.5				
	Display focus number		1	1	N/A	N/A	N/A	N/A
	PRF(KHz	z)	2.0	2.0	N/A	N/A	N/A	N/A
NOTE: N/A i	ndicates the	at there is no	correspon	ding intend	ed use or no	data reporte	ed.	

Transducer Model: 6C SN:WAPBIKA006

Operating Model: PW Mode

1	ng Model:				TIS		TIB	
Iı	ndex Label		MI		non-	-scan		TIC
				scan	A _{aprt} ≤1	A _{aprt} >1	non-scan	
Global Ma	ximum Ind	ex Value	0.74	N/A	N/A	0.48	2.32	N/A
	p _{r.3}	(MPa)	1.16					
	\mathbf{W}_0	(mW)		N/A	N/A		67.88	N/A
	Min	of[$W_{.3}(z_1)$,				40.20		
	$I_{TA.3}(z_1)$	(mW)				10.20		
Associated	z_1	(cm)				3.06		
Acoustic Parameters	Z _{bp}	(cm)				3.04		
	Z _{sp}	(cm)					3.28	
1 01011101010	z@PII _{.3ma}	(cm)	3.28					
	$d_{eq}(Z_{sp})$	(cm)					0.38	
	fc	(MHz)	2.48	N/A	N/A	2.48	2.48	N/A
	Dim of	X(cm)		N/A	N/A	2.50	2.50	N/A
	A _{aprt}	Y (cm)		N/A	N/A	1.30	1.30	N/A
	PD	(usec)	3.03					
	PRF	(Hz)	2500.00					
Other	pr@PIImax (MPa)		1.54					
Information	deq@PIIm	ax (cm)					0.38	
mormation	Focal	FL _x (cm)		N/A	N/A	4.00		N/A
	Length	FL _y (cm)		N/A	N/A	8.00		N/A
	I _{PA.3} @MI	max(W/cm ²)	48.04					
	Display f	ocus(mm)	40	N/A	N/A	40	40	N/A
		lepth(mm)	90	N/A	N/A	90	90	N/A
	Working	icpui(iiiii)	90	1\/A	IN/A	90	90	11///
Operating	frequency	y(MHz)	2.5	N/A	N/A	2.5	2.5	N/A
Control Conditions	Display f	Display focus number		N/A	N/A	1	1	N/A
	PRF(KH	z)	2.5	N/A	N/A	2.5	2.5	N/A
	SV(mm)		1	N/A	N/A	1	1	N/A
NOTE: N/A i	ndicates th	at there is no	correspond	ling intend	led use or no	data report	ed.	

Transducer Model: 6L SN:WLPBIKA047

Operating Model: B Mode

<u> </u>	Index Label				TIS		TIB	
In	ndex Label		MI	gg	non-	-scan		TIC
				scan	A _{aprt} ≤1	A _{aprt} >1	non-scan	
Global Ma	ximum Ind	ex Value	0.53	0.20	N/A	N/A	N/A	N/A
	$p_{r.3}$	(MPa)	1.11					
	W_0	(mW)		9.60	N/A		N/A	N/A
	Min	of[$W_{.3}(z_1)$,				N/A		
	$I_{TA.3}(z_1)$	(mW)				11/71		
Associated	z_1	(cm)				N/A		
Associated	Zbp	(cm)				N/A		
Parameters	Z_{sp}	(cm)					N/A	
Tarameters	z@PII.3ma	(cm)	0.64					
	$d_{eq}(Z_{sp})$	(cm)					N/A	
	fc	(MHz)	4.38	4.38	N/A	N/A	N/A	N/A
	Dim of	X(cm)		0.96	N/A	N/A	N/A	N/A
	A _{aprt}	Y (cm)		0.44	N/A	N/A	N/A	N/A
	PD	(usec)	0.25					
	PRF	(Hz)	3765.30					
Other	pr@PIImax	pr@PII _{max} (MPa)						
Information	d _{eq} @PII _m	ax (cm)					N/A	
IIIIOIIIIauoii	Focal	FL_x (cm)		0.60	N/A	N/A		N/A
	Length	FL _y (cm)		2.00	N/A	N/A		N/A
	I _{PA.3} @MI	max(W/cm ²)	36.93					
	Display for	ocus(mm)	4, 9	4, 9	N/A	N/A	N/A	N/A
Operating	Display d	epth(mm)	20	20	N/A	N/A	N/A	N/A
Control	Working		H10.0	H10.0	N/A	N/A	N/A	N/A
Conditions	frequency	v(MHz)	1110.0	1110.0	1 1/ /1	1 1/ 1/1	1 W/ A	11/71
Conditions	Display for	Display focus		2	N/Δ	N/A	N/A	N/A
	number				N/A		N/A	1 1/ /1
NOTE: N/A i	ndicates the	at there is no	correspond	ding intend	led use or no	data reporte	ed.	

Transducer Model: 6L SN:WLPBIKA047

Operating Model: B+M Mode

1	8	D WI WIOGC			TIS		TIB	
Ir	ndex Label		MI			-scan		TIC
				scan	A _{aprt} ≤1	A _{aprt} >1	non-scan	
Global Ma	ximum Ind	ex Value	0.53	0.20	0.20	N/A	0.50	N/A
	p _{r.3}	(MPa)	1.11					
	W_0	(mW)		9.60	9.60		9.60	N/A
	Min	of[W.3(z1),				NT/A		
	$I_{TA.3}(z_1)$	(mW)				N/A		
Associated	z_1	(cm)				N/A		
Acoustic	Z _{bp}	(cm)				N/A		
Parameters	Z _{sp}	(cm)					1.16	
1 arameters	z@PII.3ma	(cm)	0.64					
	$d_{eq}(Z_{sp})$	(cm)					0.31	
	fc	(MHz)	4.38	4.38	4.38	N/A	4.38	N/A
	Dim of	X(cm)		0.96	0.96	N/A	0.96	N/A
	A _{aprt}	Y (cm)		0.44	0.44	N/A	0.44	N/A
	PD	(usec)	0.25					
	PRF	(Hz)	3765.30					
Other	pr@PIImax	(MPa)	1.22					
Information	d _{eq} @PII _m	ax (cm)					0.29	
imormation	Focal	FL _x (cm)		0.60	0.60	N/A		N/A
	Length	FL _y (cm)		2.00	2.00	N/A		N/A
	I _{PA.3} @MI	max(W/cm ²)	36.93					
		ocus(mm)	4, 9	4, 9	4, 9	N/A	4, 9	N/A
Operating		epth(mm)	20	20	20	N/A	20	N/A
Control Conditions	Working frequency(MHz)		H10.0	H10.0	H10.0	N/A	H10.0	N/A
Conditions	Display focus number		2	2	2	N/A	2	N/A
NOTE: N/A is	ndicates th	at there is no	correspond	ding intend	ed use or no	data reporte	ed.	

Transducer Model: 6L SN:WLPBIKA047 Operating Model: B+Color/B+PDI Mode

					TIS		TIB	
Iı	ndex Label		MI		non-	-scan		TIC
				scan	A _{aprt} ≤1	A _{aprt} >1	non-scan	
Global Ma	ximum Ind	ex Value	0.97	0.23	N/A	N/A	N/A	N/A
	p _{r.3}	(MPa)	2.51					
	\mathbf{W}_0	(mW)		B:6.16 Color: 3.13	N/A		N/A	N/A
	Min I _{TA.3} (z ₁)]	of[W _{.3} (z ₁), (mW)				N/A		
	Z ₁	(mw)				N/A		
Associated	Z _{bp}	(cm)				N/A		
Acoustic	Z _{sp}	(cm)					N/A	
Parameters	z@PII.3ma	(cm)	0.50					
	$d_{eq}(Z_{sp})$	(cm)					N/A	
	fc	(MHz)	Color: 6.73	B:4.38 Color: 6.73	N/A	N/A	N/A	N/A
	Dim of	X(cm)		0.96	N/A	N/A	N/A	N/A
	Aaprt	Y (cm)		0.44	N/A	N/A	N/A	N/A
	PD	(usec)	Color: 0.57					
	PRF	(Hz)	4000.00					
Other	pr@PIIma	x (MPa)	2.82					
Information	deq@PIIm	ax (cm)					N/A	
	Focal	FL _x (cm)		0.60	N/A	N/A		N/A
	Length	FL _y (cm)		2.00	N/A	N/A		N/A
	I _{PA.3} @MI	max(W/cm ²)	229.40					
	D:1 6	()	-		37/1	7.7/1	27/1	7.7/4
		ocus(mm)	6	6	N/A	N/A	N/A	N/A
		lepth(mm)	20 B:H10.	20 D.1110	N/A	N/A	N/A	N/A
Operating Control Conditions		Working frequency(MHz)		B:H10. 0 Color:6. 5	N/A	N/A	N/A	N/A
	Display f	ocus	1	1	N/A	N/A	N/A	N/A
	PRF(KH	z)	4.0	4.0	N/A	N/A	N/A	N/A
NOTE: N/A i	ndicates th	at there is no	correspon	ding intend	ed use or no	data reporte	ed.	

Transducer Model: 6L SN:WLPBIKA047

Operating Model: PW Mode

	Index Label				TIS		TIB	
I	ndex Label		MI	gaan	non-	-scan	non soon	TIC
				scan	A _{aprt} ≤1	A _{aprt} >1	non-scan	
Global Ma	aximum Ind	ex Value	0.80	N/A	0.22	N/A	0.54	N/A
	p _{r.3}	(MPa)	2.07					
	\mathbf{W}_0	(mW)		N/A	6.87		6.87	N/A
	Min	of[$W_{.3}(z_1)$,				N/A		
	$I_{TA.3}(z_1)$	(mW)				11///		
Associated	z_1	(cm)				N/A		
	Z _{bp}	(cm)				N/A		
Acoustic Parameters	Z_{sp}	(cm)					1.22	
1 arameters	z@PII.3ma	(cm)	0.52					
	$d_{eq}(Z_{sp})$	(cm)					0.15	
	f_c	(MHz)	6.61	N/A	6.61	N/A	6.61	N/A
	Dim of	X(cm)		N/A	0.96	N/A	0.96	N/A
	Aaprt	Y (cm)		N/A	0.44	N/A	0.44	N/A
	PD	(usec)	1.20					
	PRF	(Hz)	4000.00					
Other	pr@PIImax (MPa)		2.32					
Information	deq@PIIm	deq@PIImax (cm)					0.09	
Illioillation	Focal	FL _x (cm)		N/A	0.60	N/A		N/A
	Length	FL _y (cm)		N/A	2.00	N/A		N/A
	I _{PA.3} @MI _{max} (W/cm ²)		128.70					
	Dienley f	ocus(mm)		NT/A		N T/A		3.1/4
			6	N/A	6	N/A	6	N/A
		lepth(mm)	20	N/A	20	N/A	20	N/A
Operating	Working frequency	y(MHz)	6.5	N/A	6.5	N/A	6.5	N/A
Control Conditions	Display f	Display focus number		N/A	1	N/A	1	N/A
	PRF(KHz	z)	4.0	N/A	4.0	N/A	4.0	N/A
-	SV(mm)		1	N/A	1	N/A	1	N/A

Transducer Model: 5CL(C) SN:WXPBIKA032

Operating Model: B Mode

_	Index Label				TIS		TIB	
Iı	ndex Label		MI		non-	-scan		TIC
				scan	A _{aprt} ≤1	A _{aprt} >1	non-scan	
Global Ma	ximum Ind	ex Value	1.32	0.14	N/A	N/A	N/A	N/A
	p _{r.3}	(MPa)	2.04					
	\mathbf{W}_0	(mW)		29.86	N/A		N/A	N/A
	Min	of[$W_{.3}(z_1)$,				N/A		
	$I_{TA.3}(z_1)$	(mW)				IN/A		
Associated	z_1	(cm)				N/A		
Associated Acoustic Parameters	Z _{bp}	(cm)				N/A		
	Z _{sp}	(cm)					N/A	
1 arameters	z@PII.3ma	(cm)	3.96					
	$d_{eq}(Z_{sp})$	(cm)					N/A	
	fc	(MHz)	2.39	2.39	N/A	N/A	N/A	N/A
	Dim of	X(cm)		2.50	N/A	N/A	N/A	N/A
	A _{aprt}	Y (cm)		1.30	N/A	N/A	N/A	N/A
	PD	(usec)	0.54					
	PRF	(Hz)	1598.50					
Other	pr@PIImax (MPa)		2.83					
Information	d _{eq} @PII _m	ax (cm)					N/A	
Information	Focal	FL _x (cm)		4.00	N/A	N/A		N/A
	Length	FL _y (cm)		8.00	N/A	N/A		N/A
	I _{PA.3} @MI	max(W/cm ²)	143.14					
	Display f	ocus(mm)	40	40	N/A	N/A	N/A	N/A
Operating		epth(mm)	90	90	N/A	N/A	N/A	N/A
Control	Working		H5.0	H5.0	N/A	N/A	N/A	N/A
Conditions		frequency(MHz)		115.0	1 1/11	14/11	14/11	1 1/11
Conditions	Display focus		1	1	N/A	N/A	N/A	N/A
	number						IN/A	1 1/11
NOTE: N/A i	ndicates th	at there is no	correspond	ding intend	led use or no	data reporte	ed.	

Transducer Model: 5CL(C) SN:WXPBIKA032

Operating Model: B+M Mode

	-6	D WI WIOUC			TIS		TIB	
Ir	ndex Label		MI			scan	1115	TIC
	2001 20001		1,11	scan	A _{aprt} ≤1	A _{aprt} >1	non-scan	110
Global Ma	ximum Ind	ex Value	1.32	0.14	N/A	0.21	1.23	N/A
	$p_{r,3}$ (MPa)		2.04					
	W_0	(mW)		29.86	N/A		29.86	N/A
	Min	of[W _{.3} (z ₁),				10.01		
	$I_{TA.3}(z_1)]$	(mW)				18.01		
	z_1	(cm)				3.06		
Associated	Z _{bp}	(cm)				3.04		
Acoustic Parameters	Z _{sp}	(cm)					3.86	
Parameters	z@PII _{.3ma}	(cm)	3.96					
	$d_{eq}(Z_{sp}) \\$	(cm)					0.29	
	f_c	(MHz)	2.39	2.39	N/A	2.39	2.39	N/A
	Dim of	X(cm)		2.50	N/A	2.50	2.50	N/A
	A_{aprt}	Y (cm)		1.30	N/A	1.30	1.30	N/A
	PD	(usec)	0.54					
	PRF	(Hz)	1598.50					
Other	$p_r@PII_{max}\ (MPa)$		2.83					
Information	d _{eq} @PII _m	ax (cm)					0.29	
imormation	Focal	FL _x (cm)		4.00	N/A	4.00		N/A
	Length	FL _y (cm)		8.00	N/A	8.00		N/A
	I _{PA.3} @MI	max(W/cm ²)	143.14					
		ocus(mm)	40	40	N/A	40	40	N/A
Operating		epth(mm)	90	90	N/A	90	90	N/A
Control Conditions	Working frequency(MHz)		H5.0	H5.0	N/A	H5.0	H5.0	N/A
Conditions	Display focus number		1	1	N/A	1	1	N/A
NOTE: N/A is	ndicates th	at there is no	correspond	ling intend	ed use or no	data reporte	ed.	

Transducer Model: 5CL(C) SN:WXPBIKA032

Operating Model: B+Color/B+PDI Mode

1	8	B+C0101/B+1			TIS		TIB	
It	ndex Label		MI		non-	scan		TIC
				scan	A _{aprt} ≤1	A _{aprt} >1	non-scan	
Global Ma	ximum Ind	ex Value	1.32	0.15	N/A	N/A	N/A	N/A
	p _{r.3}	(MPa)	2.04					
				B:23.14				
	\mathbf{W}_0	(mW)		Color:	N/A		N/A	N/A
				8.31				
	Min	$of[W_{.3}(z_1),$				N/A		
	$I_{TA.3}(z_1)$	(mW)				IN/A		
Associated	\mathbf{z}_1	(cm)				N/A		
Acoustic	Z _{bp}	(cm)				N/A		
Parameters	Z _{sp}	(cm)					N/A	
1 drameters	z@PII.3ma	(cm)	3.96					
	$d_{eq}(Z_{sp})$	(cm)					N/A	
				B:2.39				
	f_c	(MHz)	B:2.39	Color:2	N/A	N/A	N/A	N/A
				.44				
	Dim of	X(cm)		2.50	N/A	N/A	N/A	N/A
	Aaprt	Y (cm)		1.30	N/A	N/A	N/A	N/A
	PD	(usec)	B:0.54					
	PRF	(Hz)	2957.30					
Other	pr@PII _{max}	(MPa)	2.83					
Information	d _{eq} @PII _m	ax (cm)					N/A	
imormation	Focal	FL_{x} (cm)		4.00	N/A	N/A		N/A
	Length	FL _y (cm)		8.00	N/A	N/A		N/A
	I _{PA.3} @MI	max(W/cm ²)	143.14					
	Display f	ocus(mm)	40	40	N/A	N/A	N/A	N/A
	Display d	epth(mm)	90	90	N/A	N/A	N/A	N/A
Operating	Working		B:H5.0	B:H5.0				
Control	frequency	(MHz)	Color:2	Color:2	N/A	N/A	N/A	N/A
Conditions			.5	.5				
	Display f	ocus	1	1	N/A	N/A	N/A	N/A
	number		•		11/11	1 1/ 2 1		
	PRF(KHz		2.0	2.0	N/A	N/A	N/A	N/A
NOTE: N/A i	ndicates th	at there is no	correspon	ding intend	ed use or no	data reporte	ed.	

Transducer Model: 5CL(C) SN:WXPBIKA032

Operating Model: PW Mode

1	ng Model:				TIS		TIB	
Iı	ndex Label		MI		non-	-scan		TIC
				scan	A _{aprt} ≤1	A _{aprt} >1	non-scan	
Global Ma	ximum Ind	ex Value	0.72	N/A	N/A	0.46	2.23	N/A
	p _{r.3}	(MPa)	1.14					
	\mathbf{W}_0	(mW)		N/A	N/A		65.16	N/A
	$ \begin{array}{c c} Min \\ I_{TA.3}(z_1) \end{array} $	of[W _{.3} (z ₁), (mW)				38.59		
	Z ₁	(cm)				3.06		
Associated Acoustic	Z _{bp}	(cm)				3.04		
	Z _{sp}	(cm)					3.28	
Parameters	z@PII _{.3ma}	` ′	3.28					
	$d_{eq}(Z_{sp})$	(cm)					0.38	
	fc	(MHz)	2.48	N/A	N/A	2.48	2.48	N/A
	Dim of	X(cm)		N/A	N/A	2.50	2.50	N/A
	A _{aprt}	Y (cm)		N/A	N/A	1.30	1.30	N/A
	PD	(usec)	3.03					
	PRF	(Hz)	2500.00					
Other	pr@PIImax (MPa)		1.51					
Information	d _{eq} @PII _m	ax (cm)					0.38	
imormation	Focal	FL _x (cm)		N/A	N/A	4.00		N/A
	Length	FL _y (cm)		N/A	N/A	8.00		N/A
	I _{PA.3} @MI _{max} (W/cm ²)		46.12					
	Display f	ocus(mm)	40	N/A	N/A	40	40	N/A
	Display d	lepth(mm)	90	N/A	N/A	90	90	N/A
Operating	Working frequency	y(MHz)	2.5	N/A	N/A	2.5	2.5	N/A
Control Conditions		Display focus		N/A	N/A	1	1	N/A
	PRF(KH	z)	2.5	N/A	N/A	2.5	2.5	N/A
	SV(mm)		1	N/A	N/A	1	1	N/A
NOTE: N/A i	ndicates th	at there is no	correspond	ling intend	ded use or no	data reporte	ed.	

Transducer Model: 5CL(L) SN:WXPBIKA032

Operating Model: B Mode

<u> </u>	Index Label				TIS		TIB	
Iı	ndex Label		MI		non-	-scan		TIC
				scan	A _{aprt} ≤1	A _{aprt} >1	non-scan	
Global Ma	ximum Ind	ex Value	0.51	0.19	N/A	N/A	N/A	N/A
	p _{r.3}	(MPa)	1.08					
	\mathbf{W}_0	(mW)		9.02	N/A		N/A	N/A
	Min	of[W.3(z1),				N/A		
	$I_{TA.3}(z_1)$	(mW)				IN/A		
A san sintad	\mathbf{z}_1	(cm)				N/A		
Associated Acoustic	Z _{bp}	(cm)				N/A		
Parameters	Z _{sp}	(cm)					N/A	
rarameters	z@PII.3ma	(cm)	0.64					
	$d_{eq}(Z_{sp})$	(cm)					N/A	
	fc	(MHz)	4.38	4.38	N/A	N/A	N/A	N/A
	Dim of	X(cm)		0.96	N/A	N/A	N/A	N/A
	A _{aprt}	Y (cm)		0.44	N/A	N/A	N/A	N/A
	PD	(usec)	0.25					
	PRF	(Hz)	3765.30					
Other	pr@PIImax (MPa)		1.18					
Information	deq@PIIm	ax (cm)					N/A	
mormation	Focal	FL _x (cm)		0.60	N/A	N/A		N/A
	Length	FL _y (cm)		2.00	N/A	N/A		N/A
	I _{PA.3} @MI	max(W/cm ²)	34.71					
	Display for	ocus(mm)	4, 9	4, 9	N/A	N/A	N/A	N/A
Operating	Display d	epth(mm)	20	20	N/A	N/A	N/A	N/A
Control	Working		H10.0	H10.0	N/A	N/A	N/A	N/A
Conditions	frequency		1110.0	1110.0	11/1	11/71	11//1	11/11
Conditions	Display focus		2	2	N/A	N/A	N/A	N/A
	number	1 1						1 1/11
NOTE: N/A i	ndicates the	at there is no	correspond	ding intend	led use or no	data reporte	ed.	

Transducer Model: 5CL(L) SN:WXPBIKA032

Operating Model: B+M Mode

		B+W Wlode			TIS		TIB	
Ir	ndex Label		MI		non-	-scan		TIC
				scan	A _{aprt} ≤1	A _{aprt} >1	non-scan	
Global Ma	ximum Ind	ex Value	0.51	0.19	0.19	N/A	0.47	N/A
	p _{r.3}	(MPa)	1.08					
	\mathbf{W}_0	(mW)		9.02	9.02		9.02	N/A
	Min	of[$W_{.3}(z_1)$,				N/A		
	$I_{TA.3}(z_1)$	(mW)				IN/A		
Associated	z_1	(cm)				N/A		
Acoustic	Z _{bp}	(cm)				N/A		
Parameters	Z _{sp}	(cm)					1.16	
1 drameters	z@PII _{.3ma}	(cm)	0.64					
	$d_{eq}(Z_{sp})$	(cm)					0.31	
	fc	(MHz)	4.38	4.38	4.38	N/A	4.38	N/A
	Dim of	X(cm)		0.96	0.96	N/A	0.96	N/A
	A _{aprt}	Y (cm)		0.44	0.44	N/A	0.44	N/A
	PD	(usec)	0.25					
	PRF	(Hz)	3765.30					
Other	pr@PIImax	(MPa)	1.18					
Information	d _{eq} @PII _m	ax (cm)					0.29	
imormation	Focal	FL _x (cm)		0.60	0.60	N/A		N/A
	Length	FL _y (cm)		2.00	2.00	N/A		N/A
	I _{PA.3} @MI	max(W/cm ²)	34.71					
		ocus(mm)	4, 9	4, 9	4, 9	N/A	4, 9	N/A
Operating		epth(mm)	20	20	20	N/A	20	N/A
Control Conditions	frequency	Working frequency(MHz)		H10.0	H10.0	N/A	H10.0	N/A
Conditions	Display focus number		2	2	2	N/A	2	N/A
NOTE: N/A i	ndicates th	at there is no	correspond	ding intend	ed use or no	data reporte	ed.	

Transducer Model: 5CL(L) SN:WXPBIKA032

Operating Model: B+Color/B+PDI Mode

_	<u> </u>	B + COIOI/B + I			TIS		TIB	
Ir	ndex Label		MI		non-	-scan		TIC
				scan	A _{aprt} ≤1	A _{aprt} >1	non-scan	
Global Ma	ximum Ind	ex Value	0.94	0.21	N/A	N/A	N/A	N/A
	$p_{r.3}$	(MPa)	2.43					
				B:5.79				
	\mathbf{W}_0	(mW)		Color:	N/A		N/A	N/A
				2.94				
	Min	of[$W_{.3}(z_1)$,				N/A		
	$I_{TA.3}(z_1)]$	(mW)						
Associated	Zı	(cm)				N/A		
Acoustic	Z _{bp}	(cm)				N/A	27/4	
Parameters	Z _{sp}	(cm)	0.50				N/A	
	<u>z@PII.3ma</u>		0.50				DT/A	
	$d_{eq}(Z_{sp})$	(cm)		D.4.20			N/A	
	f_c	(MHz)	Color:	B:4.38	NT/A	NT/A	NI/A	N/A
	1c	(IVIIIZ)	6.73	Color: 6.73	N/A	N/A	N/A	N/A
	Dim of	X(cm)		0.73	N/A	N/A	N/A	N/A
	A _{aprt}	Y (cm)		0.44	N/A	N/A	N/A	N/A
	2 kaprı	1 (cm)	Color:	0.11	14/11	10/11	14/11	11/21
	PD	(usec)	0.57					
	PRF	(Hz)	4000.00					
Other	pr@PII _{max} (MPa)		2.74					
Information	d _{eq} @PII _m	_{nax} (cm)					N/A	
	Focal	FL _x (cm)		0.60	N/A	N/A		N/A
	Length	FL _y (cm)		2.00	N/A	N/A		N/A
	I _{PA.3} @MI	max(W/cm ²)	215.64					
	Display f	ocus(mm)	6	6	N/A	N/A	N/A	N/A
	Display d	lepth(mm)	20	20	N/A	N/A	N/A	N/A
Operating	Working		B:H10.	B:H10.				
Control	frequency	y(MHz)	0	0	N/A	N/A	N/A	N/A
Conditions			Color:6	Color:6.	1771	10/21	14/14	14/21
			.5	5				
	Display f number	ocus	1	1	N/A	N/A	N/A	N/A
	PRF(KH	z)	4.0	4.0	N/A	N/A	N/A	N/A
NOTE: N/A is	ndicates th	at there is no	correspon	ding intend		data reporte	ed.	

Transducer Model: 5CL(L) SN:WXPBIKA032

Operating Model: PW Mode

					TIS		TIB	
I	ndex Label		MI	2200	non-scan			TIC
				scan	A _{aprt} ≤1	A _{aprt} >1	non-scan	
Global Ma	aximum Ind	ex Value	0.78	N/A	0.21	N/A	0.51	N/A
	p _{r.3}	(MPa)	2.01					
	\mathbf{W}_0	(mW)		N/A	6.46		6.46	N/A
	Min	of[$W_{.3}(z_1)$,				N/A		
	$I_{TA.3}(z_1)$	(mW)				14/11		
Associated	z_1	(cm)				N/A		
Acoustic	Z _{bp}	(cm)				N/A		
Parameters	Z _{sp}	(cm)					1.22	
1 arameters	z@PII.3ma	(cm)	0.52					
	$d_{eq}(Z_{sp})$	(cm)					0.15	
	fc	(MHz)	6.61	N/A	6.61	N/A	6.61	N/A
	Dim of	X(cm)		N/A	0.96	N/A	0.96	N/A
	Aaprt	Y (cm)		N/A	0.44	N/A	0.44	N/A
	PD	(usec)	1.20					
	PRF	(Hz)	4000.00					
Other	p _r @PII _{max} (MPa)		2.25					
Information	deq@PIIm	deq@PIImax (cm)					0.09	
Illioillation	Focal	FL _x (cm)		N/A	0.60	N/A		N/A
	Length	FL _y (cm)		N/A	2.00	N/A		N/A
	I _{PA.3} @MI _{max} (W/cm ²)		120.98					
	D: 1 0							
		ocus(mm)	6	N/A	6	N/A	6	N/A
		lepth(mm)	20	N/A	20	N/A	20	N/A
Operating Control Conditions	Working frequency	y(MHz)	6.5	N/A	6.5	N/A	6.5	N/A
	Display f	Display focus number		N/A	1	N/A	1	N/A
	PRF(KHz	z)	4.0	N/A	4.0	N/A	4.0	N/A
	SV(mm)	` ′		N/A	1	N/A	1	N/A

Transducer Model: CT(C) SN:WXPBILA006

Operating Model: B Mode

1	ig Model.	2 1110 412			TIS		TIB	
Ir	ndex Label		MI		non-	scan		TIC
				scan	A _{aprt} ≤1	A _{aprt} >1	non-scan	
Global Ma	ximum Ind	ex Value	1.33	0.14	N/A	N/A	N/A	N/A
	p _{r.3}	(MPa)	2.05					
	\mathbf{W}_0	(mW)		30.17	N/A		N/A	N/A
	Min	of[W.3(z1),				NT/A		
	$I_{TA.3}(z_1)$	(mW)				N/A		
Associated	z_1	(cm)				N/A		
Associated	Z _{bp}	(cm)				N/A		
Parameters	Z _{sp}	(cm)					N/A	
1 arameters	z@PII.3ma	(cm)	3.96					
	$d_{eq}(Z_{sp})$	(cm)					N/A	
	fc	(MHz)	2.39	2.39	N/A	N/A	N/A	N/A
	Dim of	X(cm)		2.50	N/A	N/A	N/A	N/A
	A _{aprt}	Y (cm)		1.30	N/A	N/A	N/A	N/A
	PD	(usec)	0.54					
	PRF	(Hz)	1598.50					
Other	pr@PIImax (MPa)		2.85					
Information	d _{eq} @PII _m	ax (cm)					N/A	
Information	Focal	FL _x (cm)		4.00	N/A	N/A		N/A
	Length	FL _y (cm)		8.00	N/A	N/A		N/A
	I _{PA.3} @MI	max(W/cm ²)	144.63					
		ocus(mm)	40	40	N/A	N/A	N/A	N/A
Operating		epth(mm)	90	90	N/A	N/A	N/A	N/A
Control Conditions	Working frequency(MHz)		H5.0	H5.0	N/A	N/A	N/A	N/A
Conditions	Display for number	ocus	1	1	N/A	N/A	N/A	N/A
NOTE: N/A i	ndicates th	at there is no	correspond	ling intend	ed use or no	data reporte	ed.	

Transducer Model: CT(C) SN:WXPBILA006

Operating Model: B+M Mode

		D WI WIOUC			TIS		TIB	
It	ndex Label		MI			-scan		TIC
				scan	A _{aprt} ≤1	A _{aprt} >1	non-scan	
Global Ma	ximum Ind	ex Value	1.33	0.14	N/A	0.20	1.24	N/A
	p _{r.3}	(MPa)	2.05					
	W_0	(mW)		30.17	N/A		30.17	N/A
	Min	of[W.3(z1),				19.20		
	$I_{TA.3}(z_1)$	(mW)				18.20		
Associated	z_1	(cm)				3.06		
Acoustic	Z _{bp}	(cm)				3.04		
Parameters	Z_{sp}	(cm)					3.86	
1 arameters	z@PII.3ma	(cm)	3.96					
	$d_{eq}(Z_{sp})$	(cm)					0.29	
	fc	(MHz)	2.39	2.39	N/A	2.39	2.39	N/A
	Dim of	X(cm)		2.50	N/A	2.50	2.50	N/A
	A _{aprt}	Y (cm)		1.30	N/A	1.30	1.30	N/A
	PD	(usec)	0.54					
	PRF	(Hz)	1598.50					
Other	pr@PIImax (MPa)		2.85					
Information	d _{eq} @PII _m	ax (cm)					0.29	
Information	Focal	FL _x (cm)		4.00	N/A	4.00		N/A
	Length	FL _y (cm)		8.00	N/A	8.00		N/A
	I _{PA.3} @MI _{max} (W/cm ²)		144.63					
		ocus(mm)	40	40	N/A	40	40	N/A
Operating		lepth(mm)	90	90	N/A	90	90	N/A
Control Conditions		Working frequency(MHz)		H5.0	N/A	H5.0	H5.0	N/A
Conditions	Display for number	ocus	1	1	N/A	1	1	N/A
NOTE: N/A i	ndicates th	at there is no	correspond	ding intend	led use or no	data reporte	ed.	

Transducer Model: CT(C) SN:WXPBILA006 Operating Model: B+Color/B+PDI Mode

эрегин	<u> </u>	D+C0101/D+1	BIMOGE		TIS		TIB	
I ₁	ndex Label		MI		non-	-scan		TIC
				scan	A _{aprt} ≤1	A _{aprt} >1	non-scan	
Global Ma	ximum Ind	ex Value	1.33	0.15	N/A	N/A	N/A	N/A
	p _{r.3}	(MPa)	2.05					
				B:23.38				
	\mathbf{W}_0	(mW)		Color:	N/A		N/A	N/A
				8.40				
	Min	of $[W_{.3}(z_1),$				N/A		
	$I_{TA.3}(z_1)]$	(mW)				14/71		
Associated	Zı	(cm)				N/A		
Acoustic	Z _{bp}	(cm)				N/A		
Parameters	Z _{sp}	(cm)					N/A	
1 drameters	z@PII.3ma	(cm)	3.96					
	$d_{eq}(Z_{sp})$	(cm)					N/A	
				B:2.39				
	fc	(MHz)	B:2.39	Color:2	N/A	N/A	N/A	N/A
				.44				
	Dim of	X(cm)		2.50	N/A	N/A	N/A	N/A
	A _{aprt}	Y (cm)		1.30	N/A	N/A	N/A	N/A
	PD	(usec)	B:0.54					
	PRF (Hz)		2957.30					
Other	p _r @PII _{max}	(MPa)	2.85					
Information	d _{eq} @PII _m						N/A	
THIOTHIAGION	Focal	FL _x (cm)		4.00	N/A	N/A		N/A
	Length	FL _y (cm)		8.00	N/A	N/A		N/A
	I _{PA.3} @MI	max(W/cm ²)	144.63					
		ocus(mm)	40	40	N/A	N/A	N/A	N/A
		epth(mm)	90	90	N/A	N/A	N/A	N/A
Operating	Working		B:H5.0	B:H5.0				
Control	frequency	(MHz)	Color:2	Color:2	N/A	N/A	N/A	N/A
Conditions			.5	.5				
	Display f	ocus	1	1	N/A	N/A	N/A	N/A
	number							
	PRF(KHz		2.0	2.0	N/A	N/A	N/A	N/A
NOTE: N/A i	ndicates th	at there is no	correspond	ding intend	ed use or no	data reporte	ed.	

Transducer Model: CT(C) SN:WXPBILA006

Operating Model: PW Mode

					TIS		TIB	
Iı	ndex Label		MI		non-	-scan		TIC
				scan	A _{aprt} ≤1	A _{aprt} >1	non-scan	
Global Ma	ximum Ind	ex Value	0.73	N/A	N/A	0.47	2.25	N/A
	p _{r.3}	(MPa)	1.15					
	\mathbf{W}_0	(mW)		N/A	N/A		65.80	N/A
	Min	of $[W_{.3}(z_1),$				38.99		
	$I_{TA.3}(z_1)$	(mW)						
Associated	Zl	(cm)				3.06		
Acoustic	Z _{bp}	(cm)				3.04		
Parameters	Z _{sp}	(cm)					3.28	
	z@PII _{.3ma}		3.28					
	$d_{eq}(Z_{sp})$	(cm)					0.38	
	fc	(MHz)	2.48	N/A	N/A	2.48	2.48	N/A
	Dim of	X(cm)		N/A	N/A	2.50	2.50	N/A
	A _{aprt}	Y (cm)		N/A	N/A	1.30	1.30	N/A
	PD	(usec)	3.03					
	PRF	(Hz)	2500.00					
Other	pr@PII _{max} (MPa)		1.52					
Information	d _{eq} @PII _{max} (cm)						0.38	
	Focal	FL _x (cm)		N/A	N/A	4.00		N/A
	Length	FL _y (cm)		N/A	N/A	8.00		N/A
	I _{PA.3} @MI _{max} (W/cm ²)		46.60					
	Display f	ocus(mm)	40	N/A	N/A	40	40	N/A
	Display d	lepth(mm)	90	N/A	N/A	90	90	N/A
Operating	Working		2.5	N/A	N/A	2.5	2.5	N/A
Control Conditions	frequency(MHz) Display focus number		1	N/A	N/A	1	1	N/A
	PRF(KHz	<u>z)</u>	2.5	N/A	N/A	2.5	2.5	N/A
	SV(mm)		1	N/A	N/A	1	1	N/A
NOTE: N/A i	ndicates th	at there is no	correspond	ling intend	led use or no	data renorto	ed.	

Transducer Model: CT(T) SN:WXPBILA006

Operating Model: B Mode

	ig woder.	2 1110 00 2			TIS		TIB	
Ir	ndex Label		MI		non-	scan		TIC
				scan	A _{aprt} ≤1	A _{aprt} >1	non-scan	
Global Ma	ximum Ind	ex Value	0.91	0.27	N/A	N/A	N/A	N/A
	p _{r.3}	(MPa)	2.05					
	W_0	(mW)		11.20	N/A		N/A	N/A
	Min	of[$W_{.3}(z_1)$,				N/A		
	$I_{TA.3}(z_1)$	(mW)				IN/A		
Associated	\mathbf{z}_1	(cm)				N/A		
Acoustic	Z _{bp}	(cm)				N/A		
Parameters	Z _{sp}	(cm)					N/A	
1 arameters	z@PII.3ma	(cm)	1.52					
	$d_{eq}(Z_{sp})$	(cm)					N/A	
	fc	(MHz)	5.08	5.08	N/A	N/A	N/A	N/A
	Dim of	X(cm)		0.64	N/A	N/A	N/A	N/A
	A _{aprt}	Y (cm)		0.44	N/A	N/A	N/A	N/A
	PD	(usec)	0.27					
	PRF	(Hz)	2735.00					
Other	pr@PIImax (MPa)		2.68					
Information	d _{eq} @PII _m	ax (cm)					N/A	
Information	Focal	FL _x (cm)		1.50	N/A	N/A		N/A
	Length	FL _y (cm)		2.40	N/A	N/A		N/A
	I _{PA.3} @MI	max(W/cm ²)	155.00					
	Display f	ocus(mm)	10, 20	10, 20	N/A	N/A	N/A	N/A
Operating		epth(mm)	30	30	N/A	N/A	N/A	N/A
Control Conditions	Working frequency(MHz)		H8.0	H8.0	N/A	N/A	N/A	N/A
Conditions	Display for number	ocus	2	2	N/A	N/A	N/A	N/A
NOTE: N/A i	ndicates th	at there is no	correspond	ding intend	ed use or no	data reporte	ed.	

Transducer Model: CT(T) SN:WXPBILA006

Operating Model: B+M Mode

		D WI WIOUC			TIS		TIB	
Ir	ndex Label		MI			-scan		TIC
				scan	A _{aprt} ≤1	A _{aprt} >1	non-scan	
Global Ma	ximum Ind	ex Value	0.91	0.27	0.27	N/A	1.09	N/A
	p _{r.3}	(MPa)	2.05					
	W_0	(mW)		11.20	11.20		11.20	N/A
	Min	of[W.3(z1),				37/4		
	$I_{TA.3}(z_1)$	(mW)				N/A		
	z_1	(cm)				N/A		
Associated Acoustic	Z _{bp}	(cm)				N/A		
Parameters	Z _{sp}	(cm)					1.50	
rarameters	z@PII _{.3ma}	(cm)	1.52					
	$d_{eq}(Z_{sp})$	(cm)					0.14	
	fc	(MHz)	5.08	5.08	5.08	N/A	5.08	N/A
	Dim of	X(cm)		0.64	0.64	N/A	0.64	N/A
	A _{aprt}	Y (cm)		0.44	0.44	N/A	0.44	N/A
	PD	(usec)	0.27					
	PRF	(Hz)	2735.00					
Other	pr@PIImax (MPa)		2.68					
Information	d _{eq} @PII _m	ax (cm)					0.13	
Information	Focal	FL _x (cm)		1.50	1.50	N/A		N/A
	Length	FL _y (cm)		2.40	2.40	N/A		N/A
	I _{PA.3} @MI	max(W/cm ²)	155.00					
	Display f	ocus(mm)	10, 20	10, 20	10, 20	N/A	10, 20	N/A
Operating		epth(mm)	30	30	30	N/A	30	N/A
Control Conditions	Working frequency(MHz)		H8.0	H8.0	H8.0	N/A	H8.0	N/A
Conditions	Display for number	ocus	2	2	2	N/A	2	N/A
NOTE: N/A i	ndicates th	at there is no	correspond	ding intend	ed use or no	data reporte	ed.	

Transducer Model: CT(T) SN:WXPBILA006 Operating Model: B+Color/B+PDI Mode

ор стани	ing iviouei.	B+Color/B+I	DI Wode		TIS		TIB	
Iı	ndex Label		MI		non	-scan		TIC
				scan	A _{aprt} ≤1	A _{aprt} >1	non-scan	
Global Ma	ximum Ind	ex Value	0.91	0.25	N/A	N/A	N/A	N/A
	p _{r.3}	(MPa)	2.05					
				B:7.76				
	\mathbf{W}_0	(mW)		Color:	N/A		N/A	N/A
				1.77				
	Min	of $[W_{.3}(z_1),$				N/A		
	$I_{TA.3}(z_1)]$	(mW)				11/7		
Associated	\mathbf{z}_1	(cm)				N/A		
Associated	Z _{bp}	(cm)				N/A		
Parameters	Z _{sp}	(cm)					N/A	
1 drameters	z@PII.3ma	(cm)	1.52					
	$d_{eq}(Z_{sp})$	(cm)					N/A	
				B:5.08				
	fc	(MHz)	B:5.08	Color:	N/A	N/A	N/A	N/A
				6.63				
	Dim of	X(cm)		0.64	N/A	N/A	N/A	N/A
	Aaprt	Y (cm)		0.44	N/A	N/A	N/A	N/A
	PD	(usec)	B: 0.27					
	PRF (Hz)		3166.00					
Other	pr@PII _{max}		2.68					
Information	d _{eq} @PII _m	ax (cm)					N/A	
	Focal	FL _x (cm)		1.50	N/A	N/A		N/A
	Length	FL _y (cm)		2.40	N/A	N/A		N/A
	I _{PA.3} @MI	max(W/cm ²)	155.00					
		ocus(mm)	10	10	N/A	N/A	N/A	N/A
		lepth(mm)	30	30	N/A	N/A	N/A	N/A
Operating	Working		B:H8.0	B:H8.0				
Control	frequency	y(MHz)	Color:	Color:	N/A	N/A	N/A	N/A
Conditions			6.5	6.5				
	Display for number	ocus	1	1	N/A	N/A	N/A	N/A
	PRF(KHz	z)	4.0	4.0	N/A	N/A	N/A	N/A
NOTE: N/A i	ndicates th	at there is no	correspond	ding intend	ed use or no	data reporte	ed.	

Transducer Model: CT(T) SN:WXPBILA006

Operating Model: PW Mode

					TIS		TIB	
I	ndex Label		MI	2200	non-	-scan		TIC
				scan	A _{aprt} ≤1	A _{aprt} >1	non-scan	
Global Ma	aximum Ind	ex Value	0.63	N/A	0.22	N/A	0.59	N/A
	p _{r.3}	(MPa)	1.63					
	\mathbf{W}_0	(mW)		N/A	7.04		7.04	N/A
	Min	of[$W_{.3}(z_1)$,				N/A		
	$I_{TA.3}(z_1)$	(mW)				IV/A		
Associated	z_1	(cm)				N/A		
Acoustic	Z _{bp}	(cm)				N/A		
Parameters	Z _{sp}	(cm)					0.90	
1 drameters	z@PII.3ma	(cm)	0.70					
	$d_{eq}(Z_{sp})$	(cm)					0.18	
	f_c	(MHz)	6.63	N/A	6.63	N/A	6.63	N/A
	Dim of	X(cm)		N/A	0.64	N/A	0.64	N/A
	Aaprt	Y (cm)		N/A	0.44	N/A	0.44	N/A
	PD	(usec)	0.56					
	PRF	(Hz)	4000.00					
Other	pr@PII _{max} (MPa)		1.92					
Information	d _{eq} @PII _{max} (cm)						0.17	
imormation	Focal	FL _x (cm)		N/A	1.50	N/A		N/A
	Length	FL _y (cm)		N/A	2.40	N/A		N/A
	I _{PA.3} @MI _{max} (W/cm ²)		103.10					
	Display f	ocus(mm)	10	N/A	10	N/A	10	N/A
	Display d	lepth(mm)	30	N/A	30	N/A	30	N/A
Operating	Working frequency	•	6.5	N/A	6.5	N/A	6.5	N/A
Control Conditions	Display f	Display focus		N/A	1	N/A	1	N/A
	PRF(KHz	z)	4.0	N/A	4.0	N/A	4.0	N/A
	SV(mm)		1	N/A	1	N/A	1	N/A



SUNGO Europe B.V. Olympisch Stadion 24, 1076DE Amsterdam, Netherlands



Manufacturer: Guangzhou Sonostar Technologies Co., Ltd.

Address of facility:504#, C Building, #27 Yayingshi Road, Science Town, 510655 Guangzhou, PEOPLE'S REPUBLIC OF CHINA

Tel: 020-32382095

Fax: 020-62614030

Website: www.Sonostar.cn

E-mail:sonostar@sonostar.net